

AxVIEW Video System and LED Lamp Controller for commercial diving activities

Instruction Manual

Revision 21

June 2025



This manual and the information contained herein are provided for use as an installation and operation guide. No license or rights to manufacture, reproduce, or sell either the manual or articles described herein are given.

AXSUB's Quality Assurance System is certified by QUASAR in accordance with ISO 9001:2015 in all of AXSUB Inc operations (Quality Certificate No. Q3749).

AXSUB Inc. does not assume any responsibility for losses or claims by third parties, which may arise through the use of this device and accessories.

Due to continuous product development, AXSUB Inc. reserves the right to change specifications without notice.

Specifications contained herein are subject to change and these changes will be reported in subsequent release notes or new editions.

Copyright © 2025 AXSUB Inc. Rimouski, Quebec, Canada, and/or their licensors

The name AxVIEW and all AXSUB product names are either trademarks or registered trademarks of AXSUB Inc. and/or their licensors. Other company and product names mentioned herein may be trademarks of their respective owners.

Table of Contents

1. Introduction.....	6
1.1 System Description.....	6
1.2 Product Coding Scheme.....	6
1.3 Product Lineup.....	6
2. Safety Information.....	7
2.1 Terms in this Manual.....	7
2.2 Symbols on the product.....	7
2.3 Safety Guidelines.....	7
2.3.1 Safety Guidelines – General.....	7
2.3.2 Safety Guidelines – Power.....	8
2.3.3 Safety Guidelines – Environment.....	8
2.3.4 Safety Guidelines – Battery operations.....	9
2.3.5 Safety Guidelines – Handling and Installation.....	9
2.3.6 Safety Guidelines – Terminals and Equipment.....	9
2.3.7 Safety Guidelines – Usage.....	9
3. Getting Started.....	10
3.1 General Specifications.....	10
3.2 System Description.....	12
3.3 Standard Accessories.....	13
3.4 Optional Accessories.....	13
3.5 System Options.....	13
3.6 Equipment.....	14
3.7 Operating Requirements and Installation.....	15
3.7.1 Environment.....	17
3.7.2 Powering the AxVIEW ON and OFF.....	18
3.7.3 Check the Underwater LED Lamp.....	18
3.7.4 Check the Underwater Camera.....	19
3.8 Cleaning.....	19
3.9 Maintenance, Service & Repair.....	19
4. System Description.....	20
4.1 General Overview.....	20


4.1.1 Power.....	23
4.1.2 Diver Terminals.....	25
4.1.3 Secondary Inputs.....	25
4.1.4 Video Outputs.....	25
4.1.5 Equipment Switches.....	26
4.1.6 Dimming Potentiometers.....	26
4.1.7 USB Terminal.....	26
4.1.8 Serial Number.....	26
4.1.9 Optional Terminal.....	26
4.2 AxVIEW Equipment Connection.....	27
4.2.1 System Diagram – Fully Charged Portable System.....	27
4.2.2 System Diagram – Fully Charged Rackmount System.....	27
4.2.3 Video and Data Cable Wiring.....	28
4.3 Optional Panel Overview.....	31
4.3.1 7-Inch Monitor.....	31
4.3.2 13-Inch Monitor.....	32
4.3.3 HD Personal Video Recorder (PVR).....	33
5. AXSUB Limited Warranty for AxVIEW and Accessories.....	34
5.1 Warranty Period.....	34
5.2 Exclusions and Limitations.....	35
5.3 Access to AXSUB warranty service.....	36
5.4 Other Important Notices.....	36
5.5 Limitation of Liability.....	37
6. Disposal of the Device.....	38
Annex A – Personal Video Recorder (PVR).....	39
Controllers.....	41
HD PVR Type 1.....	42
Preview and Recording Instructions.....	42
Playback Instructions.....	43
Setup Instructions.....	44
HD PVR Type 2.....	49
Preview and Recording Instructions.....	49
Playback Instructions.....	50

1. Introduction

1.1 System Description

The AxVIEW is a surface video system and LED lamp controller for commercial diving activities, both inshore and offshore. It incorporates video and variable light controls for up to 3 divers. The system is designed to be installed in a commercial diving unit, whether in a closed trailer, cargo container, or other. The system is available in two different versions; a rack mounted version for installation in a 19-inch rack cabinet and a portable version built inside a rugged transport case. The V line of product comes with software support for depth monitoring, video on screen display, dive data logging, audio and video recording on the computer and more. All AxVIEW systems come with video terminals to display video signal from the divers on external monitors and portable systems can optionally be equipped with built-in monitors. Other options include built-in audio-video recording on SD cards and battery backup.

1.2 Product Coding Scheme

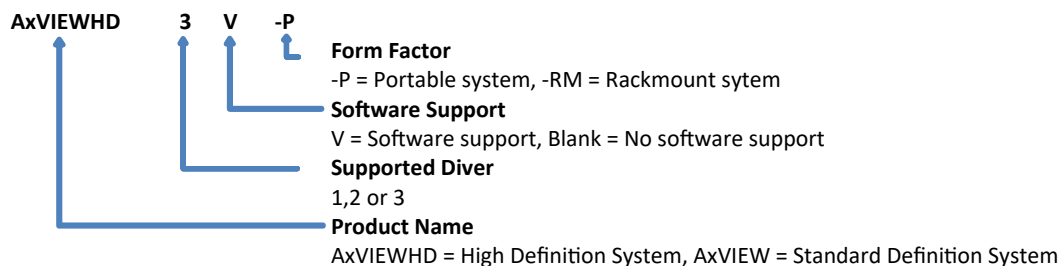

1.3 Product Lineup

Product Lineup – Portable Systems

Portable standard definition systems	Portable standard definition system with software support	Portable high definition systems	Portable high definition system with software support
AxVIEW 2-P	AxVIEW 2V-P	AxVIEWHD 2-P	AxVIEWHD 2V-P
AxVIEW 1-P	AxVIEW 1V-P	AxVIEWHD 1-P	AxVIEWHD 1V-P

Product Lineup – Rackmount Systems

Rackmount standard definition systems	Rackmount standard definition system with software support	Rackmount high definition systems	Rackmount high definition system with software support	Rackmount high definition system with software support and built-in audio-video recorder on SD card
AxVIEW 3-RM	AxVIEW 3V-RM	AxVIEWHD 3-RM	AxVIEWHD 3V-RM	
AxVIEW 2-RM	AxVIEW 2V-RM	AxVIEWHD 2-RM	AxVIEWHD 2V-RM	AxVIEWHD 2VR-RM
AxVIEW 1-RM	AxVIEW 1V-RM	AxVIEWHD 1-RM	AxVIEWHD 1V-RM	

2. Safety Information

2.1 Terms in this Manual

These terms may appear in this manual:



WARNING. Warning statements identify conditions or practices that could result in injury or loss of life.



CAUTION. Caution statements identify conditions or practices that could result in damage to this product or other property.

2.2 Symbols on the product

The following symbols may appear on the product:

	Caution; Refer to manual		AC (Alternating Current)
	Hazardous voltage		DC (Direct Current)
	Mains disconnected; OFF (Power)		
	Mains Connected; ON (Power)		

2.3 Safety Guidelines

If the equipment is used in a manner not specified in this manual, the protection provided by the equipment may be impaired. Do not attempt to use the AxVIEW without reading this instruction manual in its entirety. Make sure that you fully understand the use, displays and limitations of the product. Any confusion resulting from neglecting to follow this instruction manual or from improper use of the product may lead to serious injury or death. If you have any questions about the manual or the product, contact your AXSUB dealer before using the product.

2.3.1 Safety Guidelines – General

To avoid personal injury and prevent damage to this product or any equipment connected to it, follow these guidelines:

- Use the product only as specified in this manual or the protection provided by the product might be impaired.
- **Do not operate with suspected failures.** Do not use the product if it appears damaged, a foreign object is inside the product, smoke is emitted, unusual smell is emitted, it is unusually hot or if the product is not operating properly.
- **Do not disassemble the product.** There are no serviceable parts inside. You may receive an electric shock, or foreign matter may enter and result in a fire.

2.3.2 Safety Guidelines – Power

- **Use proper power cord.** For AC main power, use only a power cord with an IEC-320 C13 plug, a maximum of 6ft and with rated current of at least 10A. For DC battery backup power, only use cable supplied with the battery pack.
- **Use proper voltage setting.** Before applying power, ensure that the voltage from the source being used is within the limits specified for the product (100 ~ 240 VAC for AC power, 24V for battery backup).
- **Ground the product when using the main AC power supply.** This product is grounded through the grounding conductor of the power cord. To avoid electric shock, the grounding conductor must be connected to earth ground. Before making connections to the input or output terminals of the product, ensure that the product is properly grounded.
- **Do not pull or insert the AC plug if your hands are wet.** Electric shock may result.
- **Clean dust and other debris of the AC plug regularly.** If dust or other debris accumulates on the plug, humidity, etc. may cause a defect in the insulation which may result in a fire.
- **Insert the AC plug completely.** If the plug is not inserted completely, fire due to overheating or electric shock may result.
- **Do not do anything that may damage the AC cord or the AC plug.** Do not damage or modify the cord, place it near hot tools, bend, twist, or pull it forcefully, place heavy objects on it, or bundle it tightly. Continuing to use a damaged cord may result in fire, short circuit or electric shock.
- **Hold the plug when unplugging the AC plug.** Pulling on the cord may damage the cord, resulting in a fire or electric shock.
- **Keep access to Power Disconnect.** Unplugging the AC plug and battery backup plug disconnects the product from the power source. Do not block access to these terminals; they must remain accessible to the user at all times. For rackmount systems, make sure the AC male plug end is always reachable, either by plugging it in a close and easily reachable wall socket, or in a properly rated power bar or power delivery unit easily reachable on the front or the side of the rack cabinet.

2.3.3 Safety Guidelines – Environment

- **Do not expose rackmount systems or opened portable systems to water, rain, snow or direct sunlight.** When operating outside of a building, use the system in a closed trailer, a cargo container, a dive vessel, a tent or other covered environment preventing rain and water splashes from all directions.
- **Rackmount systems can only be used indoor.**
- **Only use the AC power inlet of portable systems indoor.** Always use the battery power inlet if there is a risk of condensation or high humidity.
- **When using a portable system, always cover the unmated AC inlet connector with its protective cap**
- **When using a portable system, always cover the unmated Diver connectors with their protective caps**
- **When using a portable system, always cover the unmated USB connector with its protective cap**
- **When using a portable system, always cover the unmated HDMI connectors with their protective caps**
- **Do not store drinks or liquids on the product.**
- **Keep the product surfaces clean and dry.**
- **Do not use the product around explosive gas or vapor.**
- **Do not use the product in pressurized air environment.**
- **Do not use the product above 2000m in altitude.**
- **Do not touch the product in a thunderstorm if connected with AC cable or any other cable.**
- **Do not leave this product in high temperature environment for a long period of time.** Leaving this product where it will be exposed to extremely high temperatures such as near fire or in direct sunlight may cause trouble in the internal parts. Continued use in such a resulting condition may lead to short-circuiting or insulation defects, etc. which may in turn lead to a fire or electric shocks.

2.3.4 Safety Guidelines – Battery operations

- **Only use battery packs compatible with the product.** Portable AXVIEW systems are intended to work with 24VDC lead acid battery packs that can provide at least 6Ah (the maximum power consumed by the portable AXVIEW system is 140W). AXSUB's battery pack is the B15Ah-24VDC-V3, please contact your AXSUB dealer before using any other battery pack with the product.
- **Always make sure both the battery pack and portable AXVIEW system are each properly fused before connecting them together.** The fuse on the portable AXVIEW system must be a Fast Blow 6.3A fuse with a DC rating of at least 60VDC. The 021706.3 fuse by Littlefuse Inc. is the default fuse to use with the product.
- **AXSUB Battery packs can only be charged indoors.**
- **Do not charge the battery pack while the portable AxVIEW system is in use unless the AxVIEW system is AC powered**
- **Only use the battery charger approved by AxSUB for AXSUB Battery packs.** The approved model provided with the battery pack is the GC30B-6P1J Power Adaptor with Charging Function by MeanWell.

2.3.5 Safety Guidelines – Handling and Installation

- **Do not place portable systems on unstable surface.** If balance is lost, this product may fall over or drop, resulting in an injury.
- **Install rackmount system in proper cabinet.** Secure the product in a rackmount cabinet using the screws and material provided by the cabinet manufacturer and following the manufacturer's recommendations. Make sure there is a screw in each of the 4 mounting holes, otherwise the product can fall and cause injury. Do not block side openings.
- **Do not block ventilation holes of rackmount systems.** Environment in rack cabinet with many devices can get hot and rackmount AxVIEW systems have ventilations on the side of the device to help key component cooling. Make sure there is at least 3 cm between the side of rackmount AxVIEW systems and others devices or enclosures.
- **Make sure there is no tension in the cables between the AxVIEW system and the surface anchor system.** All divers' umbilical must always be secured at the surface at an anchor point by fixing the D-Ring installed on the strength member of the umbilical to the anchor point. Take care to run the cables from the anchor point to the AxVIEW system in such a way that it is not possible to trip on the cables and that no excessive tension is applied on the cables.
- **Handle the product with care during transport.** Portable systems must always be carried by the case handle and make sure the case clips are closed before carrying.
- **Clear surface of portable systems before closing the product case.** When using a portable AxVIEW system, disconnect all equipment connected to the upper and lower panels before closing the lid of the product case.
- **Do not leave any accessory in the case,** including power cords, USB and HDMI cables, laptops and/or Panasonic Toughpad®. Carry those accessories in a separate container. Accessories left in the case could damage the product such as cracking the windows of optional monitors.

2.3.6 Safety Guidelines – Terminals and Equipment

- **Observe all terminal ratings.** To avoid fire or shock hazard, observe all ratings and markings on the product. Consult the product manual for further ratings information before making connections to the product.
- **Only use equipment compatible with the product.** The product is intended to work with AxDEPTH sensors, AxLIGHT35 lights, AxSEE30, AxSEE57 and AxSEE57i cameras and all their DarkWater Visions counterparts. Equipment should be connected to the product using AXSUB Video and Data Cable and proper connectors. Contact your AXSUB dealer before using any other equipment with the product.
- **Avoid looking directly at underwater LED Lamps.** To protect your eyes from damage, never look directly at the Underwater LED Lamps as the very bright light could be harmful.
- **Do not turn on underwater LED Lamps outside of water.** AXSUB's AxLIGHT35 lights are designed to dissipate heat through their enclosure into water. They are not designed to dissipate heat in air. The AxLIGHT35 is equipped with a thermal protection circuit that will automatically shut the lights if overheat condition is detected. Lights will start running again automatically once overheat condition is removed. **Do not touch a light that has been running in air with your bare hands until the light has time to cool.**
- **Do not use open ended cables.** Always protect open ended cables with appropriate dummy plugs. (SCDC8M, RMG-3MPD, MCDC3M or MCDC5M according to cable terminals)

2.3.7 Safety Guidelines – Usage

- **For professional use.** The AxVIEW and the AXSUB Dive Data Management (AxDDM) Software are intended for professional use only. Commercial or professional diving activities may expose the divers to depths and conditions that tend to increase the risk of decompression illness (DCI).

- **Only qualified personnel trained in the proper use of surface supplied diving equipment should use the product.** No system can replace the need for proper supervisory and diver training. Insufficient or improper training may cause divers to commit errors that may lead to serious injury or death.
- **Always refer to your company procedures and methods.** The AxVIEW and the AxDDM Software are intended to be working tools for the commercial diving supervisor to crosscheck information and log information that can be referred to later on. You must always maintain and keep the paper system & external stopwatch to control the dive in case of technical problems with the product and/or equipment.
- **Perform prechecks.** Always start the product and conduct a functionality check before diving in order to ensure the pressure sensors read atmospheric pressure, that the displays work adequately and that the equipment is working and correctly secured to the diver.
- **Use back-up instruments.** Make sure that you use back-up instrumentation including a pneumo gauge, submersible pressure gauge, timer or watch, and have access to copies of the decompression tables whenever diving with the Decompression modules of the AxDDM Software.
- **There is always a risk of decompression illness (DCI) for any dive profile even if you follow the dive plan prescribed by dive tables or by a dive computer.** No procedures, dive computer or dive table will prevent the possibility of DCI. An individual's physiological make up can vary from day to day. The dive tables used in the AxDDM software cannot account for these variations. You are strongly advised to remain well within the exposure limits provided by the instrument to minimize the risk of DCI. As an added measure of safety, you should consult a physician regarding your fitness before diving.

Always remember that **you are responsible for the safety of your dives!** When used properly, the AxVIEW and the AxDDM Software are outstanding tools for assisting properly trained, certified divers in planning and executing commercial dives. They are **not a substitute to instructions given by a certified diving supervisor** or to training in the principles of decompression.

3. Getting Started

3.1 General Specifications

	Portable Systems	Rackmount Systems
POWER INPUT		
Voltage Range	100 ~ 240 VAC	
Frequency Range	50 ~ 60 Hz	
Alternative Current (Max.)	1.8 A / 110 VAC	1.0 A / 240 VAC
Mains Supply Voltage Fluctuation	±10% of the mains supply	
Overvoltage Category	Overvoltage Category II	
Battery Backup	24 VDC (Lead Acid Battery)	
Battery Backup Power (Max.)	140W	
POWER OUTPUT		
Underwater Camera	12 VDC (Typ.), 14V (Max.)	
Underwater Light	27 VDC (Typ.), 30VDC (Max.)	
ENVIRONMENTAL		
Operating Temperature	-20 ~ +50 °C [-4 ~ +122 °F]	
Humidity	20 ~ 95 % RH non-condensing	20 ~ 80 % RH non-condensing
Pollution Degree	Pollution degree 3	Pollution degree 2
Ingress Protection	Transport: IP45 Operation: IP44 *See 3.7.1 - Environment	N.A.
PHYSICAL CHARACTERISTICS		
Enclosure Type	Pelican™ iM2300 Storm Case	2U rackmount aluminum and steel enclosure
Height	17 cm [6.7 in]	8.6 cm [3.375 in]

Length	34 cm [13.4 in]	28.3 cm [11.125 in]
Width	46.2 cm [18.2 in]	43.5 cm [17.125 in]
Weight	Up to 10.5 kg [22.7 lbs]	Up to 5.0 kg [11.0 lbs]
CONNECTORS		
External Ports (All systems)	1 – IEC C14 – Power inlet	
	1 – MS3102A14S-6P-RES – 6-pin Amphenol Battery backup	1 – MS3102E18-19S-RES – 10-pin Amphenol Option
	1 per Diver – MS3102E18-8S – 8-pin Amphenol – Diver camera and light	
Additional External Ports (AxVIEW)	1 per diver – 75 Ω BNC cable jack – Camera output	
Additional External Ports (AxVIEWHD)	1 per diver – HDMI Connector – Camera output	
Additional External Ports (AxVIEW V)	1 per diver – 75 Ω BNC cable jack – Camera output	
	1 per diver – 75 Ω BNC cable jack – Encoder output	
	1 per diver – 75 Ω BNC cable jack Backup video input	1 per diver – 75 Ω BNC cable jack Video loop for blackbox
	1 – USB B (4 pin) – Female USB 2.0	
	1 – 75 Ω BNC cable jack – Audio input	2 – 75 Ω BNC cable jack – Audio input
Additional External Ports (AxVIEWHD V)	One per diver – HDMI Connector – Camera output	
	One per diver – 75 Ω BNC cable jack – Encoder output	
	1 per diver – 75 Ω BNC cable jack Backup video input	1 per diver – 75 Ω BNC cable jack Video loop for blackbox
	1 – USB B (4 pin) – USB 2.0 Female	
	1 – 75 Ω BNC cable jack – Audio input	2 – 75 Ω BNC cable jack – Audio input
Additional External Ports (AxVIEWHD VR)	1 per diver – HDMI Connector – Camera output	
	1 per diver – 75 Ω BNC cable jack – Encoder output	
	1 – HDMI Connector – PVR output	
	1 – USB B (4 pin) – Female USB 2.0	
	1 – 75 Ω BNC cable jack – Audio input	
AxDDM SOFTWARE		
Operating System	Windows 7, Windows 8 or Windows 10	
Hard Drive Space	500 MB minimum	
Video Recording	1 GB/h per diver	

B15Ah-24VDC-V3


OUTPUT	
Nominal Voltage	24 VDC
Maximum output current	6A
ENVIRONMENTAL	
Operating Temperature (charge)	-15 ~ +50 °C [5 ~ +122 °F]
Operating Temperature (discharge)	-20 ~ +50 °C [-4 ~ +122 °F]
Humidity	20 ~ 95 % RH non-condensing
Ingress Protection	Transport: IP45 Operation: IP44 *See 4.1.1 – Power – Battery Pack
SHELF LIFE (% of nominal capacity at +20 °C [+68 °F])	
1 Month	97%
3 Months	91%
6 Months	83%

3.2 System Description

The AxVIEW is a surface video system and LED lamp controller for commercial diving activities, both inshore and offshore. It incorporates video and variable light controls for up to 3 divers. The system is available in two different versions; a rack mounted version for installation in a 19-inch rack cabinet and a portable version built inside a rugged transport case. The V line of product comes with software support for depth monitoring, video on screen display, dive data logging, audio and video recording on the computer and more. All AxVIEW systems come with video terminals to display video signal from the divers on external monitors and portable systems can optionally be equipped with built-in monitors. Other options include built-in audio-video recording on SD cards and battery backup.

Standard definition systems are designed to operate with AXSUB's standard definition NTSC or PAL cameras.

High definitions systems are designed to operate with AXSUB's standard definition NTSC or PAL cameras, as well as AXSUB's high definition AHD cameras.

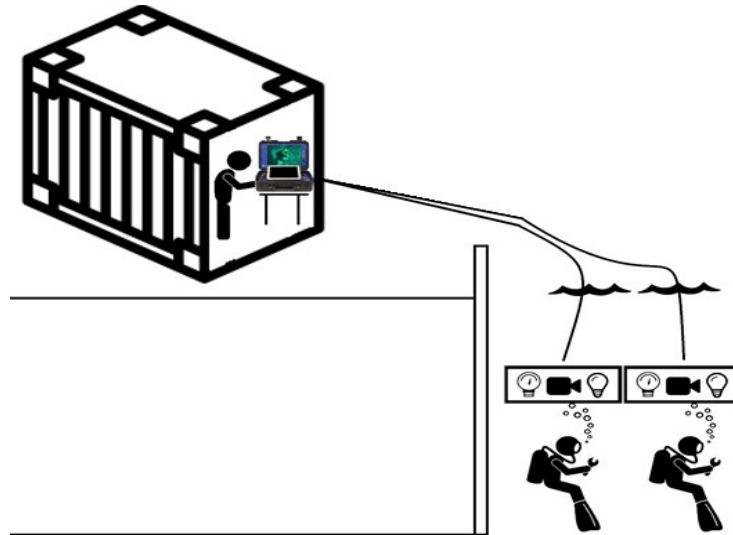

3.3 Standard Accessories

The standard accessories delivered with the AxVIEW are:

- a) Power cord: based upon the international power option
- b) 6 feet USB-A to USB-B cable (if model with software support)
- c) AXSUB documentation USB drive
- d) AXSUB equipment (See “3.6 Equipment”)

3.4 Optional Accessories

The optional accessories available with the AxVIEW are:

- a) Coaxial cables terminated with BNC connectors
- b) HDMI cables

3.5 System Options

The system options available for the portable AxVIEW systems are:

- a) P-OPT-FZG1 – Panasonic® Toughpad® FZG1. It is a rugged tablet computer engineered to withstand hard knocks, drops and spills and built to operate flawlessly in every environment — from intense heat and sunlight, to pouring rain and freezing temperatures. The operating system and the AxDDM software are pre-installed on a 128GB SSD for video and data Recording. The computer can be mounted on a tilt bracket with its power supply integrated inside the AxVIEW. (Can be combined with the monitor options).
- b) P-OPT-ITPC12-256GB - Optional 12.1" industrial capacitive touch panel computer with the AxDDM software. The operating system is pre-installed on a 256GB SSD for video and data Recording. The computer is preinstalled into the lid panel of portable systems. (Cannot be combined with the monitor options).
- c) *P-OPT-1S13 – A single 13" sun readable monitor installed in the lid panel of portable systems
- d) P-OPT-1S13-PVR1-SD – A single 13" sun readable monitor installed in the lid panel of portable systems with single channel SD card backup video recorder (Standard Definition only)
- e) P-OPT-1S13-PVR2S – A single 13" sun readable monitor installed in the lid panel of portable systems with dual channel SD card backup video recorder for both SD and HD systems. Possibility to monitor either Diver 1, Diver 2 or both
- f) *P-OPT-2S07 – Two 7" monitors installed in the lid panel of portable systems
- g) P-OPT-2S07-PVR2-SD – Two 7" monitors installed in the lid panel of portable systems with dual channel SD card backup video recorder (Standard Definition only)

*Available in SD and HD versions

3.6 Equipment

The equipment available for use with the AxVIEW are:

a) Underwater inspection Cameras

AxSEE30 – Small diameter wide angle underwater inspection camera, available in standard definition NTSC, standard definition PAL, or high definition AHD.



AxSEE57 – Wide angle underwater inspection camera, available in standard definition NTSC, standard definition PAL, or high definition AHD.



AxSEE57i – Wide angle underwater inspection camera with integrated electronic depth meter and water temperature sensor, available in standard definition NTSC, standard definition PAL, or high definition AHD.



b) Underwater LED lamps

AxLIGHT35 – Powerful underwater inspection lamp with a flux of 5000 Lumens and an illuminance of 2800 Lux at 1m



c) Underwater sensors

AxDEPTH21 – High precision depth and temperature sensor accurate up to ± 1.5 FSW



d) Video & Data Cable

Underwater cable from AXSUB. The terminated cable can be delivered with straight or right-angle connector, 3-pin pigtail for the lamp and 3-pin or 5-pin pigtail for the camera or depth sensor. Length varies according to application and dummy plugs are available to protect unused terminals.



- e) Optional battery pack to supply power as primary power source or as battery backup in case of primary power source fail (UPS function). We recommend using a battery pack (B15Ah-24VDC-V3) to enable the UPS battery back-up of the system. This will prevent shut down of the underwater lights and/or video loss in case of a supply source shut down or voltage drop.

B15Ah-24VDC-V3 – 15Ah (about 8 hours of runtime for 1 diver or 3 hours for 3 diver with AxLIGHT35 and AxSEE57i)



PSC-SINGLE-6BP/PSC-DOUBLE-6BP – Cable to wire 1 / 2 Battery Pack (V2, V3) to an AxVIEW

C01A-24VDC-XX with XX = NA, EU, UK – External charger for Battery Pack (V2, V3)

- f) Standard circular Dummy plugs
- a. SCDC8M, dummy plug for 8 pin terminated cables
 - b. RMG-3MPD, dummy plug for RMG-3-FS (light terminal)
 - c. MCDC3M, dummy plug for MCIL3F (camera terminal)
 - d. MCDC5M, dummy plug for MCIL5F (camera terminal)

3.7 Operating Requirements and Installation

This section contains information on how to install your AxVIEW.

- Unpack the product and check that you received all the items listed as standard accessories.
- Check that you also received any other equipment that you ordered with your product.
- If using a system with software support, install the AXSUB Dive Data Management (AxDDM) software on a computer along with all drivers.
- For portable systems, place the product on a bench or similar surface and make sure the system is balanced.
- For rackmount systems, secure the product in a rackmount cabinet using the screws and material provided by the cabinet manufacturer and following the manufacturer's recommendations. Make sure there is a screw in each of the 4 mounting holes
- Before operating, ensure that the ambient temperature is between -20°C and +50°C



WARNING. Observe all safety precautions listed in this manual before using this product and any associated equipment. This product is intended for use by qualified personnel who recognize shock hazards and are familiar with the safety precautions required to avoid possible injury. Read and follow all installation, operation, cleaning and maintenance information carefully before using the product. Refer to this manual for complete product specifications.



WARNING. Use properly rated cables and equipment.



WARNING. Do not loosen any screw on this product. There are no user serviceable components inside.



WARNING. Before applying power, ensure that the voltage from the source being used is within the limits specified for the product.



WARNING. Always carry portable systems by the case handle and make sure the case clips are closed before carrying.



CAUTION. Clear surface of portable systems before closing the product case. When using a portable AxVIEW system, disconnect all equipment connected to the upper and lower panels before closing the lid of the product case. Also, **DO NOT** leave any accessory in the case, including power cords, USB and HDMI cables, laptops and/or Panasonic Toughpad. Carry those accessories in a separate container. Accessories left in the case could damage the product such as cracking the windows of optional monitors.



CAUTION. The clips to close the product case of portable systems should be easy to close. In order to avoid damaging the system or cracking optional monitors, do not use force to close the case. If something is preventing the case to close normally, reopen the case and look for items that could be preventing the proper closing of the case.

3.7.1 Environment

The AxVIEW is a surface video system and LED lamp controller for commercial diving activities, both inshore and offshore. The system is designed to be installed in a commercial diving unit, whether in a closed trailer, cargo container, a dive vessel, a tent or other covered environment preventing rain and water splashes from all directions. The system is available in two different versions; a rack mounted version for installation in a 19-inch rack cabinet and a portable version built inside a rugged transport case.



WARNING. *Do not expose rackmount systems or opened portable systems to water, rain, snow or direct sunlight. When operating outside of a building, use the system in a closed trailer, a cargo container, a dive vessel, a tent or other covered environment preventing rain and water splashes from all directions.*

The rack mounted version must be installed indoor in an area where humidity and temperature are controlled and stable. If there is a temperature difference of more than 10°C between transport vehicle and installation site, or if relative air humidity is above 65%, install the system in its rack cabinet and wait for a minimum of one (1) hour before powering ON the AxVIEW so it can reach equilibrium with its environment.



WARNING. *Rackmount systems can only be used indoor.*

The portable version has two (2) modes of power. One mode is AC power, which act as a primary power source, and the other mode is DC battery power, which can be a standalone primary power source or act as a fallback source when used as battery backup for the AC power. To use the AC power source, the portable AxVIEW system must be installed indoor in an area where humidity and temperature are controlled and stable. If there is a temperature difference of more than 10°C between transport vehicle and installation site, or if relative air humidity is above 65%, install the system on its work surface and wait for a minimum of one (1) hour before powering ON the AxVIEW so it can reach equilibrium with its environment. If the system is not used in an indoor environment, such as a tent or other outdoor but covered environment preventing rain and water splashes from all directions, only the DC battery power source can be used.

The portable version has an ingress protection rating of IP45 when in transport mode (all terminals are removed, lid is closed and latches are closed). This means that water projected by a nozzle (6.3 mm (0.25 in)) against enclosure from any direction shall have no harmful effects. It has an ingress protection rating of IP44 when in operation mode (lid opened). This means that water splashing against the enclosure from any direction shall have no harmful effects.



WARNING. *Only use the AC power inlet of portable systems indoor. Always use the battery power inlet if there is a risk of condensation or high humidity.*



WARNING. *AXSUB battery packs can only be charged indoors.*

Some connectors, such as HDMI connectors, USB connector, the AC inlet of portable systems and diver terminals, come with a protective cap. Make sure the cap are installed on the connectors if they remain unused to prevent accumulation of debris inside the connectors.



CAUTION. *When using a portable system, always cover the unmated connectors with their protective caps*

3.7.2 Powering the AxVIEW ON and OFF

Power ON

1. Connect the power cord that was provided with the instrument to the power inlet on the main panel. Connect the power cord plug to a properly grounded electrical outlet.
2. Insert the 8-pin Amphenol connectors of the video and data cables into the diver terminals and screw the locking sleeve until it is fully coupled.
3. On the diver side of the video and data cables, plug the cameras, sensors and/or lights and screw the locking sleeves. Make sure every terminal on the video and data cables is connected to an equipment or protected by a dummy plug.
4. Make all the connections to additional equipment (audio sources, monitors, etc.).
5. If using a V system, connect the AxVIEW to the computer with the USB cable.
6. If using a V system, wait for the computer to detect the AxVIEW subsystem peripherals and wait for the drivers to load.
7. Put the power switch on the main panel to the ON position.
8. If using a V system, start the AxDDM software and read reference atmospheric pressure.
9. Divers can now move in water

Power OFF

1. Make sure all divers are back at the surface.
2. If using a V system, close the AxDDM software.
3. Put the power switch on the main panel to the OFF position.
4. Unscrew the locking sleeves and unplug the cameras, sensors and/or lights from the video and data cables.
5. Unscrew the locking sleeves of the 8-pin Amphenol connectors and unplug the video and data cables from the diver terminals.
6. Disconnect all additional equipment
7. Remove the power cord.
8. If your AxVIEW is equipped with the optional Panasonic Toughpad®, always remove the computer from the AxVIEW enclosure and store the computer in a transportation enclosure to prevent damage during transport.
9. When closing the lid of portable systems, make sure there is no cable or material that can damage the system when closing.

3.7.3 Check the Underwater LED Lamp

1. Make sure the LED lamp is connected to the diver terminal on the product by a properly terminated cable. Refer to section "4.3.2 Video and Data Cable Wiring" for design of proper terminated cables.
2. Make sure the locking sleeve is screwed between the video and data cable and the LED lamp
3. Make sure the AxVIEW is powered ON.
4. Put the LED switch to the ON position.
5. Rotate the dimming potentiometer clockwise to increase light intensity and counter clockwise to reduce it.
6. Check that the LED lamp turns ON.
7. Check that the dimming potentiometer allows the change of light intensity.
8. Check that the LED lamp is turned off when the LED switch is on the OFF position.



WARNING. Avoid looking directly at underwater LED lamps. To protect your eyes from damage, never look directly at the Underwater LED Lamps as the very bright light could be harmful.



WARNING. Do not run underwater LED lamps outside of water. AXSUB's AxLIGHT35 lamps are designed to dissipate heat through their enclosure into water. They are not designed to dissipate heat in air. The AxLIGHT35 is equipped with a thermal protection circuit that will automatically shut the lights if overheat condition is detected. Lights will start running again automatically once overheat condition is removed. Do not touch a light that has been running in air with your bare hands until the light has time to cool



WARNING. Keep access to the LED switches at all time to shut down the underwater equipment in case of leak, cable damage or other problem. A short circuit in a peripheral equipment can cause the main power supply of the AxVIEW to trip.

Since the AxVIEW main power supply has a hiccup mode protection, it will automatically recover after fault condition is removed. Switching the faulted equipment to the OFF position will allow the rest of the system to keep operating while the diver is returning to the surface to change or repair the faulted equipment. The diver must always return to the surface immediately when a fault condition is detected.

3.7.4 Check the Underwater Camera

1. Make sure the camera is connected to the Diver Terminal on the product by a properly terminated cable. Refer to section "4.3.2 Video and Data Cable Wiring" for design of proper terminated cables.
2. Make sure the locking sleeve is screwed between the video and data cable and the camera
3. Make sure the AxVIEW is powered ON.
4. Put the camera switch to the ON position.
5. Check that the camera is working by using a BNC coaxial cable connected between the camera video output of the AxVIEW and a powered ON monitor.
6. If using a V system, check that the video encoders are working by connecting a USB cable between the AxVIEW and a computer and then using the AxDDM software to look at the video.
7. If using a V system, check that the encoder video output is working by using a BNC coaxial cable between the AxVIEW and a powered on monitor.
8. Check that the camera is turned off when the camera switch is on the OFF position.



WARNING. *Keep access to the Camera switches at all time to shut down the underwater equipment in case of leak, cable damage or other problem. A short circuit in a peripheral equipment can cause the main power supply of the AxVIEW to trip. Since the AxVIEW main power supply has a Hiccup mode protection, it will automatically recover after fault condition is removed. Switching the faulted equipment to the OFF position will allow the rest of the system to keep operating while the diver is returning to the surface to change or repair the faulted equipment. The diver must always return to the surface immediately when a fault condition is detected.*

3.8 Cleaning

Inspect the product as often as operating conditions require. To clean the surfaces, perform the following steps:

1. Remove loose dust on the surfaces with a lint-free cloth. Use care to avoid scratching the displays.
2. Use a soft cloth dampened with water to clean the product. Use an aqueous solution of 70% isopropyl alcohol for more efficient cleaning.



CAUTION. *To avoid damage to the surface of the product, do not use any abrasive or chemical cleaning agents.*



CAUTION. *Avoid getting moisture inside the unit during external cleaning. Use only enough cleaning solution to dampen the cloth or swab.*

3.9 Maintenance, Service & Repair

Please contact your AXSUB's representative or contact AXSUB directly at sales@axsub.com or 1.418.731.1539 if there is any need for maintenance, service or repair on your AxVIEW unit. Only qualified personnel approved by AXSUB and who are aware of the hazards involved should remove the cover for repair, maintenance, or adjustment.


4. System Description

4.1 General Overview




AxVIEW 2V-P with P-OPT-1S13

The AxVIEW portable systems are installed in a Pelican™ iM2300 Storm Case. Two clips on the top side of the front edge are used to open or close the lid of the case. The case handle on the bottom side of the front edge is used to transport the product. As listed in the System Options chapter, optional lid panels can be installed in the lid of the case. Some optional lid panels comes with adjustment screws on the bottom side of the rear edge that can be used to balance the system if needed when the additional weight in the lid causes the product to tilt.

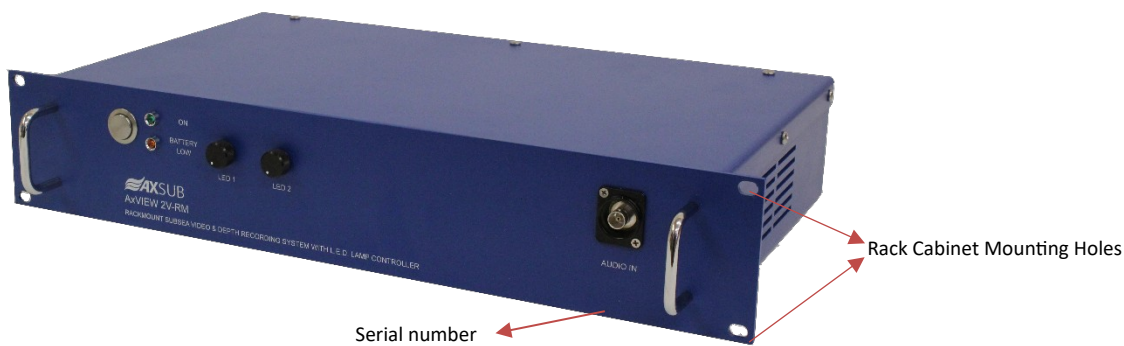


The AxVIEW rackmount systems are installed in a 19-inch rack cabinet. 4 mounting holes are required to fix the AxVIEW inside the cabinet. Use screws and material provided by the cabinet manufacturer and follow the manufacturer's recommendations.

Below is a simplified block diagram of the AxVIEW.

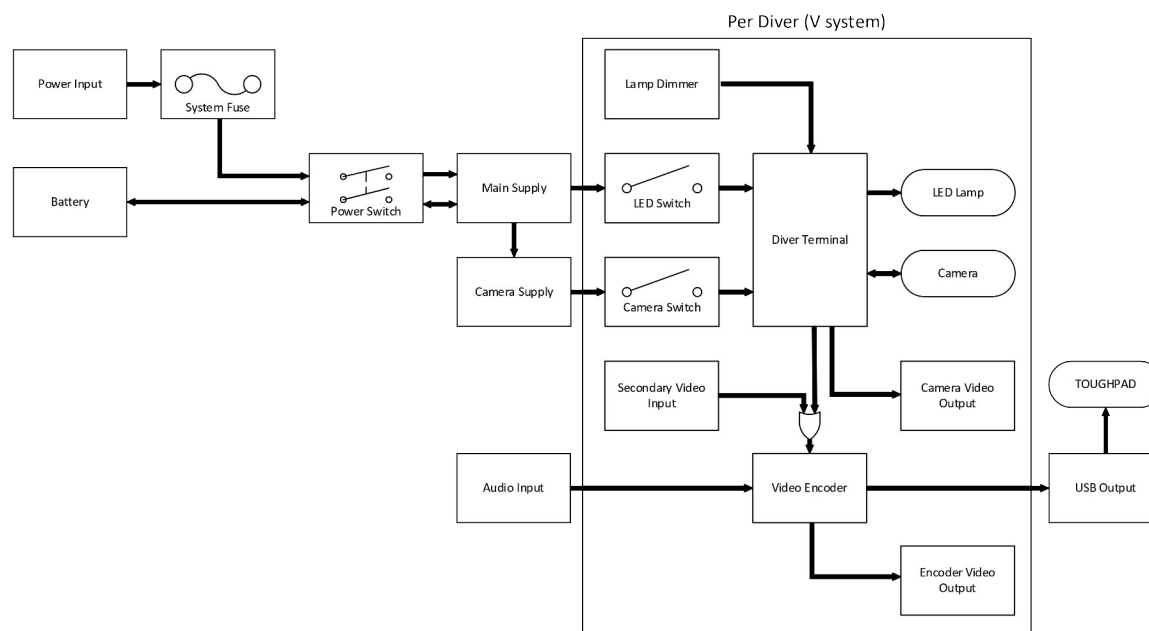


From a user point of view, this block diagram is translated into the following layout (Portable systems), which can be divided into basic functions:

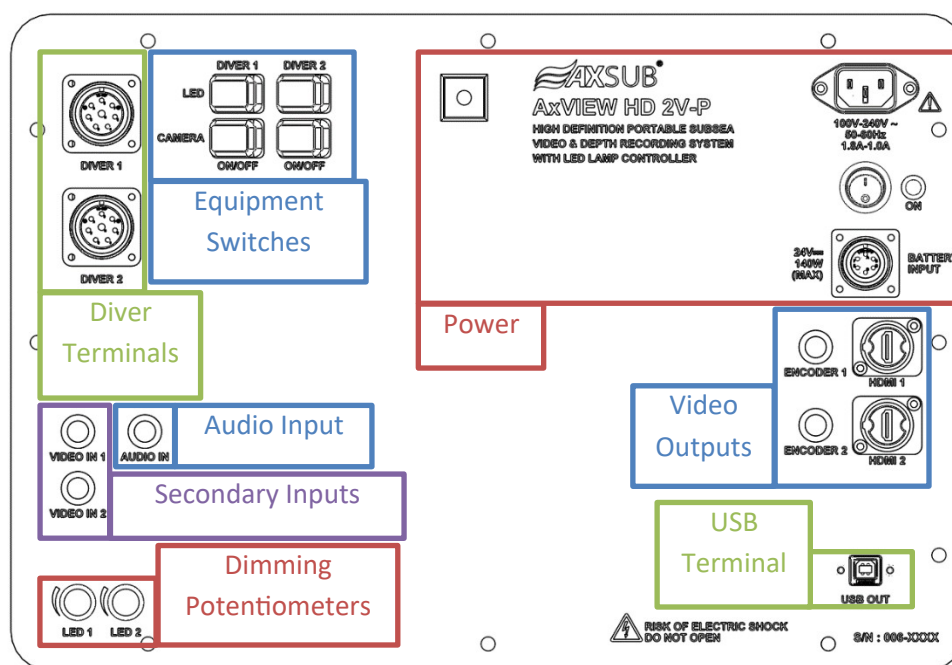


AxVIEW HD 2V-P

For rackmount systems, the equipment switches, dimming potentiometers and power switch are located on the front panel, while all terminals are located on the back panel.

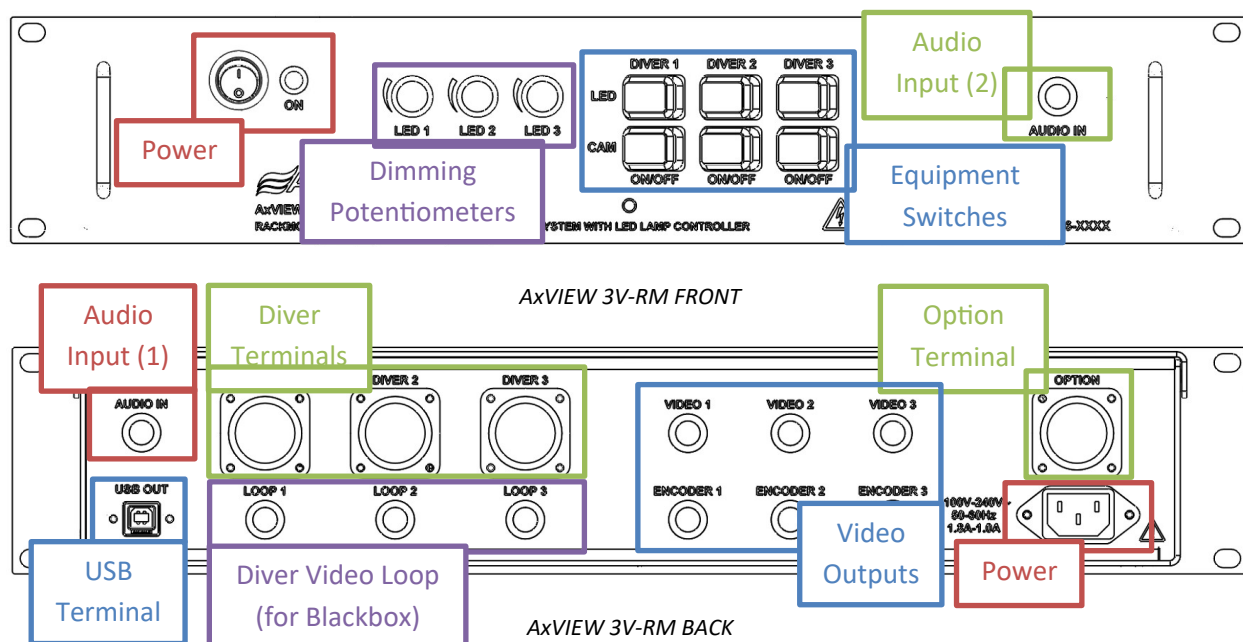

The AxVIEW HD 2VR-RM integrates a secondary recording unit (PVR) as redundancy. Files are recorded on an SD card accessible on the front panel. There is also an added controller for the PVR on the front panel and its output on the back panel. PVR OUT can be used to monitor both Diver 1 and Diver 2 and watch playback. More information about PVR features can be found in Annexes A and B.

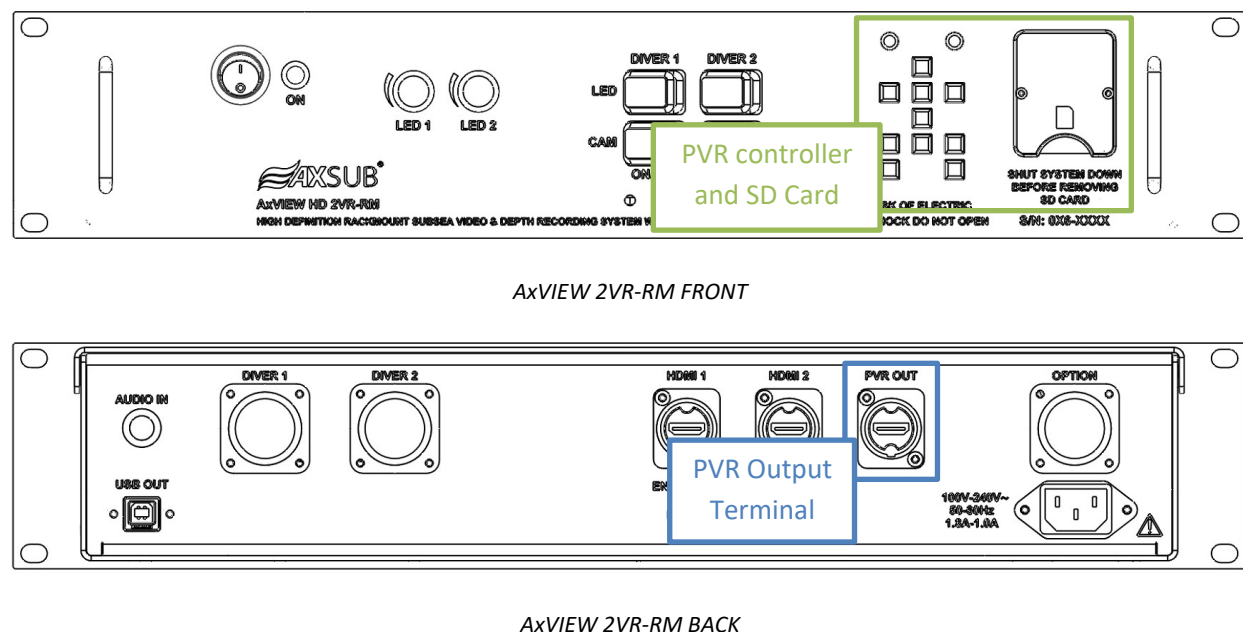

4.1.1 Power

Power Inlet

The power inlet of the product is an IEC C14 connector. It is used to connect a C13 connector on a power cord to the supply source. The power source must have a voltage rating between 100 and 240VAC with a frequency range between 50 and 60Hz, and the maximum current drawn by the product should not exceed 1.8A.



WARNING. *Use only the power cord specified for this product and certified for the country of use.*



WARNING. *Only use the AC power inlet of portable systems indoor. Always use the battery power inlet if there is a risk of condensation or high humidity.*



WARNING. *Before applying power, ensure that the voltage from the source being used is within the limits specified for the product.*



WARNING. *This product is grounded through the grounding conductor of the power cord. To avoid electric shock, the grounding conductor must be connected to earth ground. Before making connections to the input or output terminals of the product, ensure that the product is properly grounded.*

Power Switch

The power switch of the product is used to turn the unit on and off.



WARNING. *Do not block the power switch; it must remain accessible to the user at all times.*

Status LED

The green LED is used to indicate that the product is powered on.

Battery Pack Fuse



WARNING. Always make sure both the battery pack and portable AXVIEW system are each properly fused before connecting them together. The fuse on the portable AXVIEW system must be a Fast Blow 6.3A fuse with a DC rating of at least 60VDC. The 021706.3 fuse by Littlefuse Inc. is the default fuse to use with the product.

Battery Pack

Optional battery pack can be used to supply power as primary power source or as battery backup in case of primary power source fail (UPS function). This will prevent shut down of the underwater lights and/or video loss in case of a supply source shut down or voltage drop.



WARNING. Only use battery packs compatible with the product. Portable AXVIEW systems are intended to work with 24VDC lead acid battery packs that can provide at least 6Ah (the maximum power consumed by the portable AXVIEW system is 140W). AXSUB's battery pack is the B15Ah-24VDC-V3, please contact your AXSUB dealer before using any other battery pack with the product.

To charge the AXSUB battery pack, use a **GC30B-6P1J Power Adaptor with Charging Function by MeanWell.**



WARNING. AXSUB Battery packs can only be charged indoor.



WARNING. Do not charge the battery pack while the portable AxVIEW system is in use unless the AxVIEW system is AC powered


On the B15Ah-24VDC-V3 battery pack, a push button and a LED can be used to provide approximate of battery charge. Red light means the battery pack voltage is critically low and it must be charged immediately otherwise permanent degradation of cells could occur.

Orange light means the battery pack voltage is too low to be used by the AxVIEW system and it should be charged before use. Green light indicates that the voltage of the battery pack is good enough for operations.

This battery pack has an Ingress Protection rating of IP45 when in transport mode (all terminals are removed). This means that water projected by a nozzle (6.3 mm (0.25 in)) against enclosure from any direction shall have no harmful effects. It has an Ingress Protection rating of IP44 when in operation mode. This means that water splashing against the enclosure from any direction shall have no harmful effects.

Battery Backup Terminal


The Battery Backup Terminal on the AxVIEW portable system is a 6 pins MS3102A14S-6P-RES Amphenol connector with the following pinout.

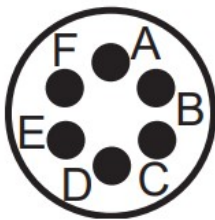

- A. NC
- B. NC
- C. NC
- D. NC
- E. Battery Ground
- F. Battery +24 VDC

4.1.2 Diver Terminals

The Diver Terminals are 8 pins MS3102E18-8S Amphenol Connectors with the following pinout.

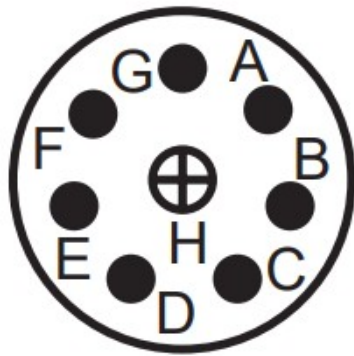

- A. Video Signal
- B. Ground
- C. +12 VDC (Camera and Depth Meter Supply)
- D. RS-485 Data B (Depth Meter Signal)
- E. RS-485 Data A (Depth Meter Signal)
- F. +27 VDC (LED Lamp Supply)
- G. Ground
- H. Lamp Dimming Signal

4.1.3 Secondary Inputs

Video Inputs

Composite video input on a 75 Ohm BNC connector. There is one auxiliary video input per diver, which is used as a backup video input when there is no camera plugged in the associated diver terminal.



CAUTION. Do not use this video input if a camera is plugged in the associated diver terminal, as both video sources will be superimposed and this will corrupt the video signal.

The primary use of this connector is to allow the recording of deck cameras for systems installed on ships. For instance, a 3 Diver system can be used with the following configuration; divers in slots 1 and 2, and deck camera in auxiliary video input 3.

Audio Input

Audio line input on a BNC connector. It is designed to work with standard input levels (0.707 V RMS) and the input impedance is 10 KΩ. The audio input is split and distributed to the video encoders for each Diver channel. The primary use of this input is to record diver communications audio over the video.

4.1.4 Video Outputs

NTSC/PAL standard definition composite video outputs on a 75 ohm BNC connector. There is one camera video output and one encoder video output per diver. On HD systems, the 75 ohm BNC connector for the camera video output is replaced by a HDMI connector. These outputs can be used to take the video signals out of the product and forward them to additional monitors or personal video recorders (PVR).

The encoder video outputs will transmit the stream from the computer, therefore including the OSD and color enhancements introduced by the AxDDM software. The system must be connected to the computer and the AxDDM software must be running for this output to work properly.

The camera video outputs will copy the stream directly from the cameras, so the video signals can still be displayed or recorded on additional systems even if no computer is used to the product.

4.1.5 Equipment Switches

The equipment switches are used to disconnect the cameras and lamps plugged in the diver terminals from the AxVIEW. For each Diver Terminal, there is one switch to shut down the LED Lamp power, and one switch to shut down the camera/depth meter power.



WARNING. *Keep access to the equipment switches at all time to shut down the underwater equipment in case of leak, cable damage or other problem. A short circuit in a peripheral equipment can cause the main power supply of the AxVIEW to trip. Since the AxVIEW main power supply has a Hiccup mode protection, it will automatically recover after fault condition is removed. Switching the faulted equipment to the OFF position will allow the rest of the system to keep operating while the diver is returning to the surface to change or repair the faulted equipment. The diver must always return to the surface immediately when a fault condition is detected.*

4.1.6 Dimming Potentiometers

There is one dimming potentiometer per diver. Rotate the dimming potentiometer clockwise to increase light intensity and counter clockwise to reduce it. The dimming potentiometer allows the range to go 0 to 100% of light intensity.

4.1.7 USB Terminal

The USB terminal is a USB B (4 pin) – USB 2.0 Female connector. Use a USB A to USB B connector to connect the product to a computer. The cable must comply with the requirements of chapter 6.6 of “USB Serial Bus Specification Revision 2”.

4.1.8 Serial Number


The serial number of the unit is dot peened in the bottom right corner of the product

4.1.9 Optional Terminal


Rackmount systems can be factory equipped with optional features such as support for additional depthmeters. Please contact your AXSUB dealer to learn more about additional options for rackmount systems.

4.2 AxVIEW Equipment Connection

4.2.1 System Diagram – Fully Charged Portable System

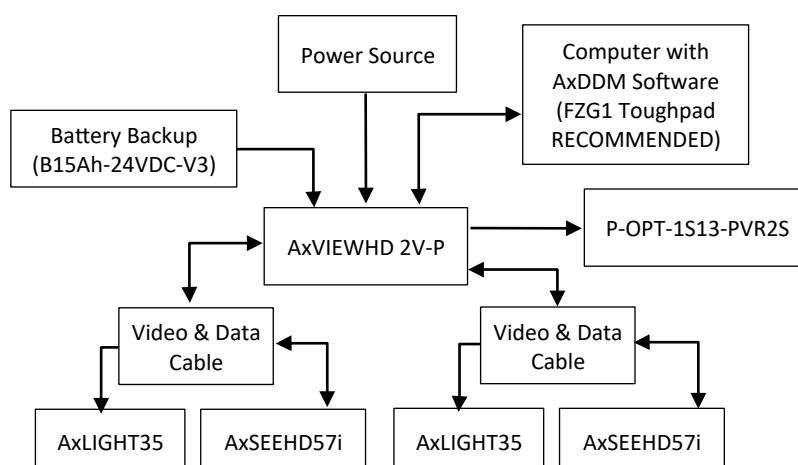


4.2.2 System Diagram – Fully Charged Rackmount System

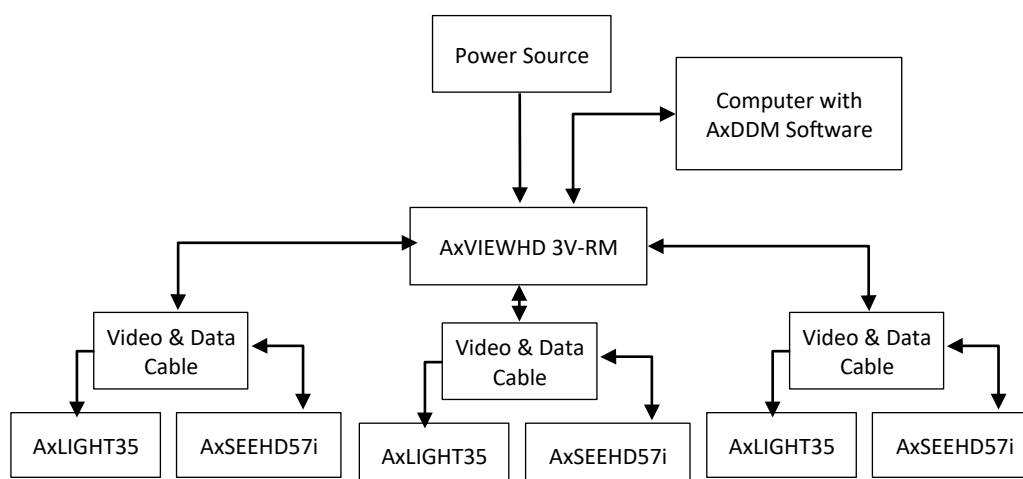


4.2.3 Video and Data Cable Wiring


4.2.3.1 VDC-TERM-3F-IL & VDC-TERM-3F-RA

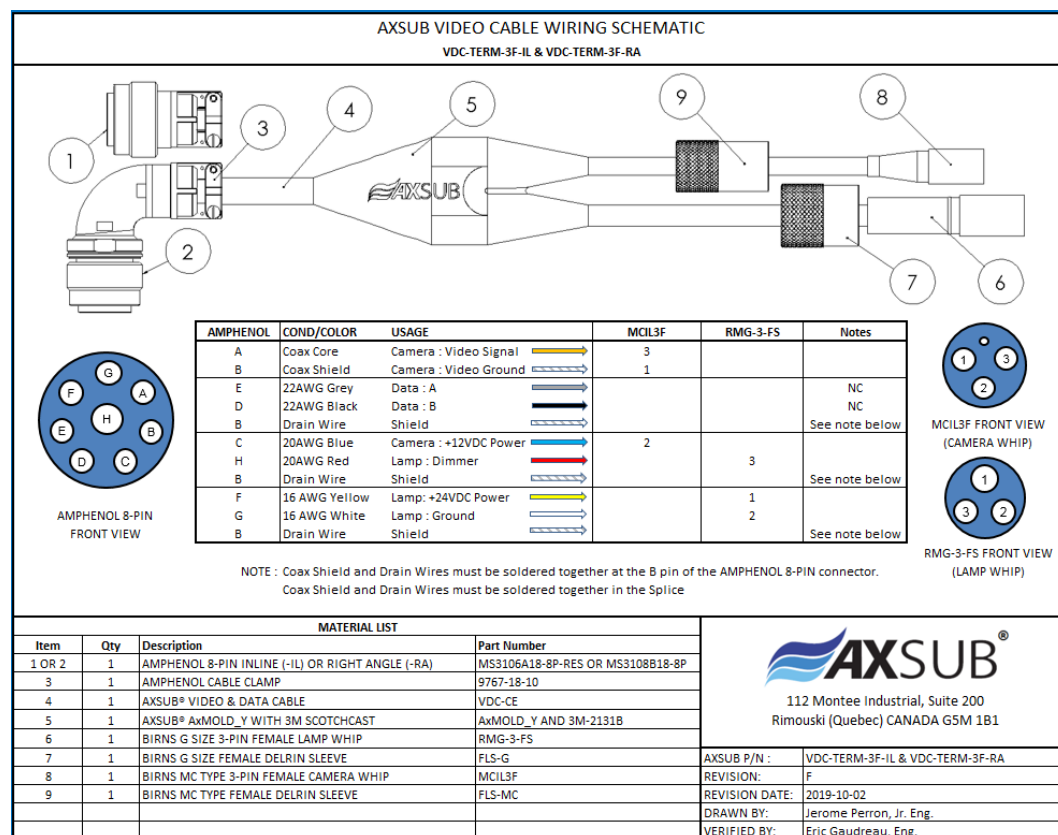


4.2.3.2 VDC-TERM-5F-IL & VDC-TERM-5F-RA

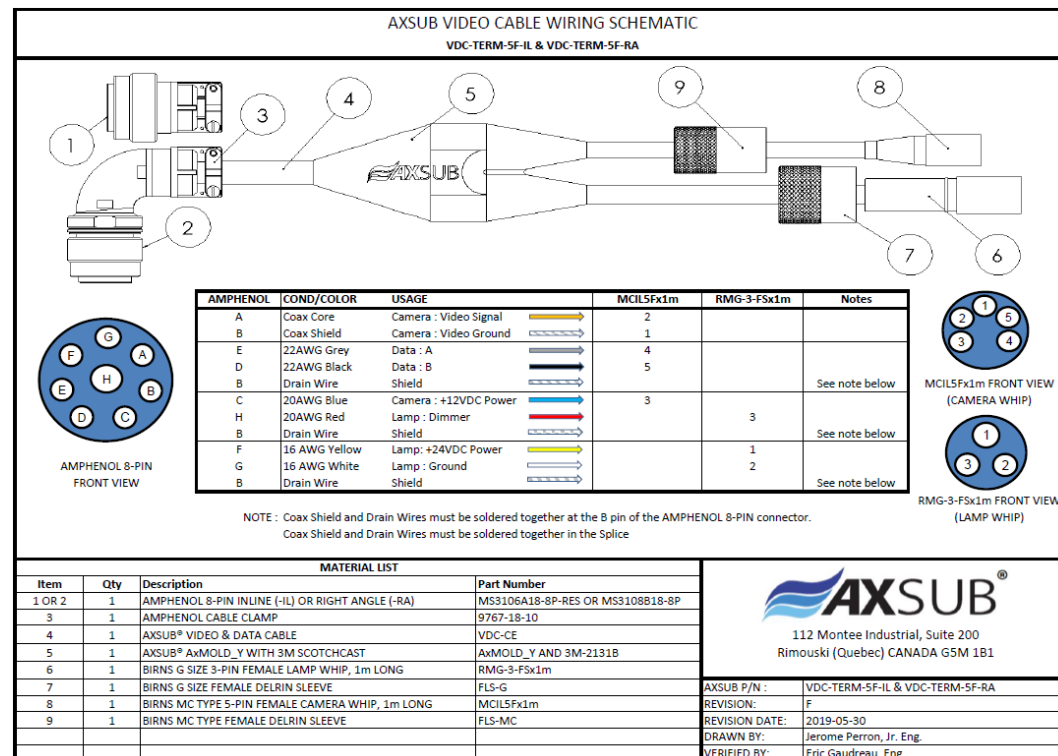


4.2.3.3 VDC-TERMI-8F-IL & VDC-TERMI-8F-RA

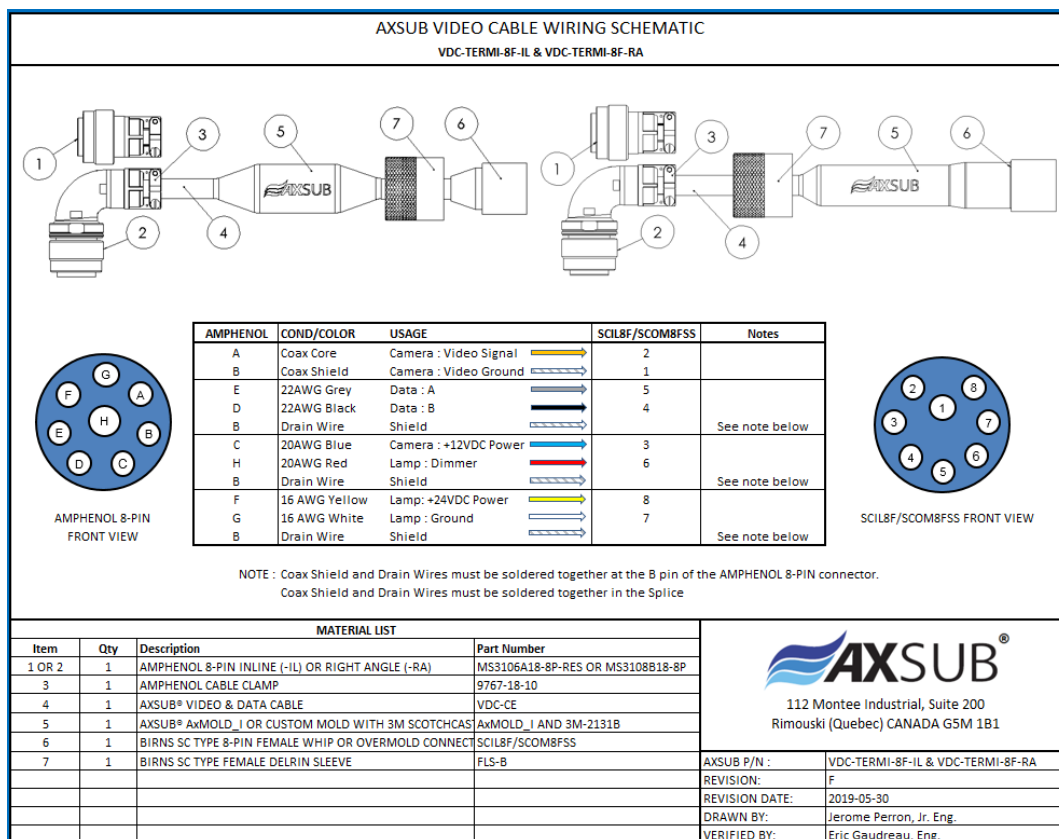

4.2.3.4 TERMY-8M-MC5F/RMG3F & TERMY-8M-MC5F/G3-1m

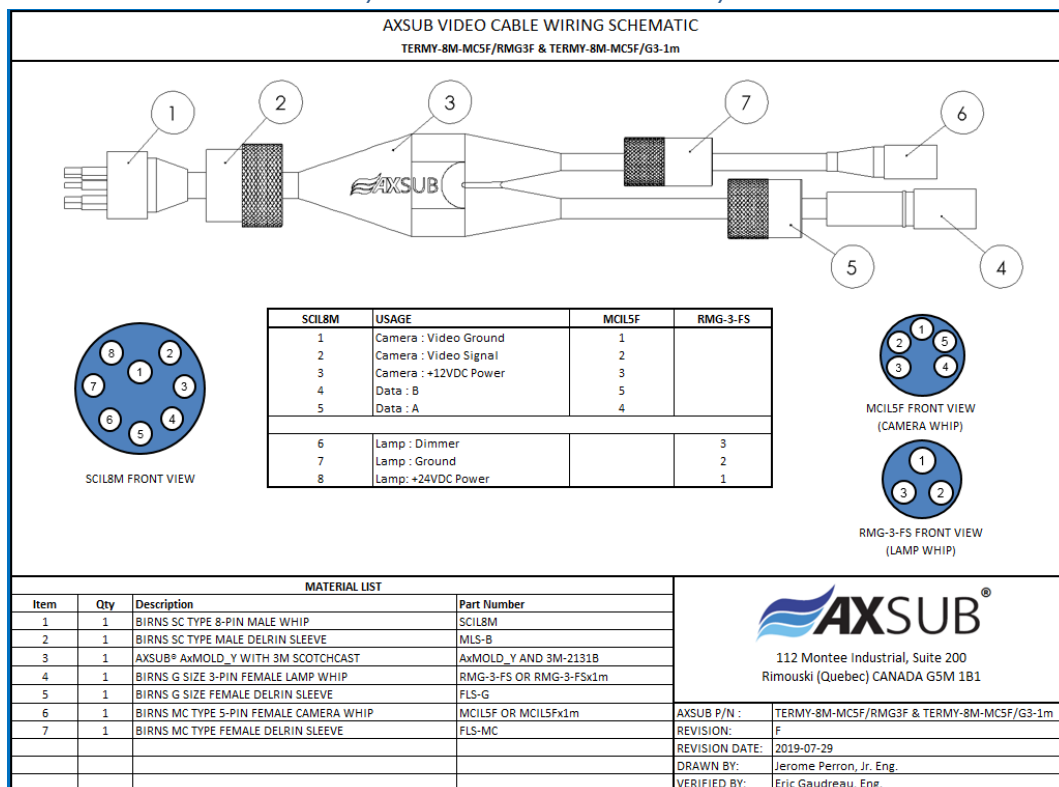

4.2.3.5 *TERMY-8M-MC3F/RMG3F & TERMY-8M-MC3F/G3-1m*

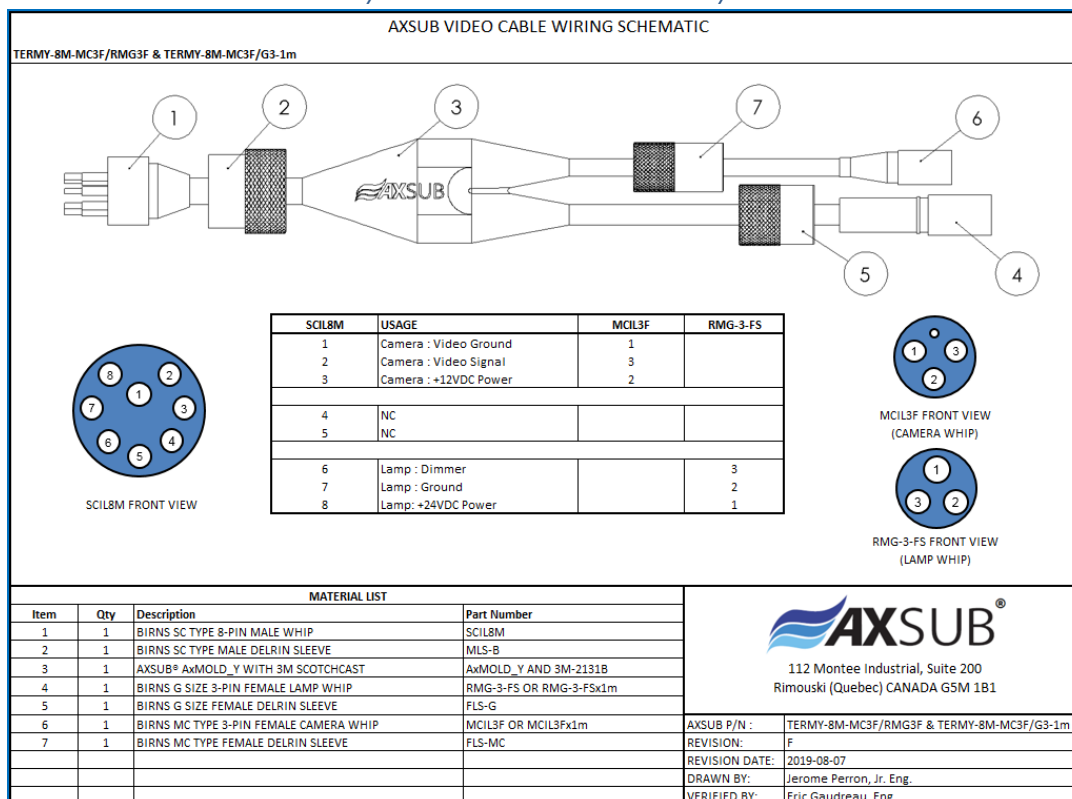

4.3 Optional Panel Overview

The portable AxVIEW systems can be equipped with optional monitors and personal video recorders (PVR) preinstalled in the lid of the case.


4.3.1 7-Inch Monitor






This panel comes with a 7" monitor that has two composite inputs (AV1 and AV2) and one HDMI input. On each system equipped with these monitors, one of the AV channel is connected to an input BNC connector on the lid panel. This connector can be used to display video coming from external sources or from the main bottom panel on the monitor.

On standard definition systems without personal video recorders, the second AV channel is internally connected to a diver camera on the main bottom panel. The signal is distributed inside the same cable that is used to deliver power to the monitor, so there is no need to plug external cables.

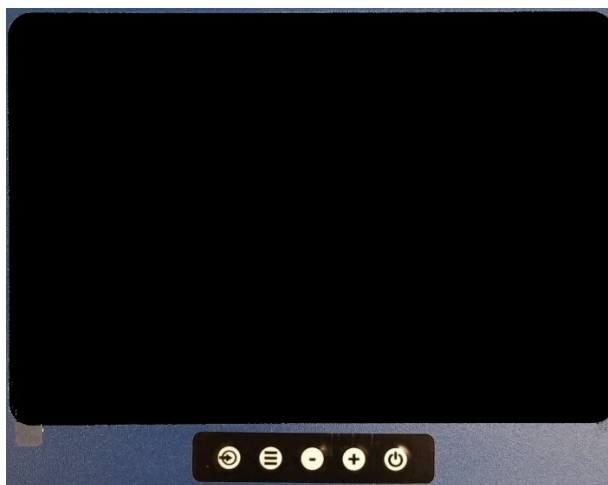On high-definition systems without personal video recorders, the other AV channel is unused and the HDMI channel is connected to an input HDMI connector on the lid panel. The video signal to the monitor must come from an external source, usually an HDMI cable between the top lid panel and the main bottom panel.

On systems with personal video recorders, the second AV channel is internally connected to the output stream of the PVR. The input signal is internally fed to the PVR by the same cable that is used to deliver power to the monitor, so there is no need to plug external cables. In high-definition systems, the output stream of the PVR is displayed in standard definition on the monitor, but the recorded file will be in high definition. In order to display the video in high definition on the monitor, the signal must come through the HDMI connector.



Keys	Function
	Channel Selection
	Monitor menu
	Decrease value in menu
	Increase value in menu
	Power on or off


4.3.2 13-Inch Monitor








This panel comes with a 13" monitor that has one composite (AV) and one HDMI input.

On standard definition systems without personal video recorders, the AV channel is internally connected to a diver camera on the main bottom panel. The signal is distributed inside the same cable that is used to deliver power to the monitor, so there is no need to plug external cables.

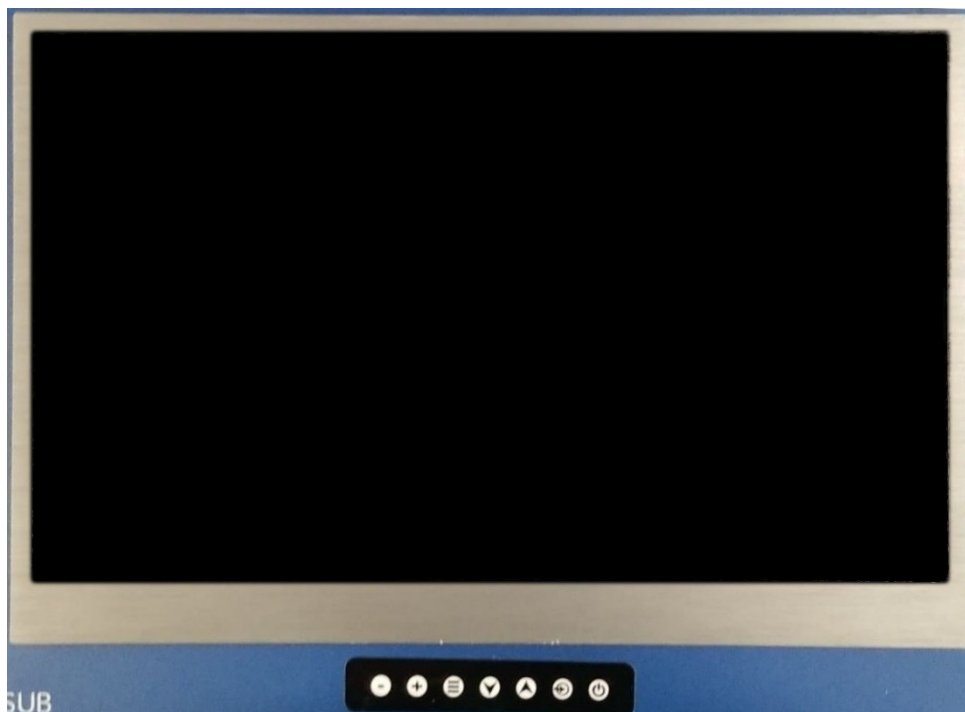On high-definition systems without personal video recorders, the AV channel is connected to an input BNC connector on the lid panel and the HDMI channel is connected to an input HDMI connector on the lid panel. The video signal to the monitor must come from an external source, usually an HDMI cable between the top lid panel and the main bottom panel.

  On systems with personal video recorders, the AV channel is internally connected to the output stream of the PVR. The input signal is internally fed to the PVR by the same cable that is used to deliver power to the monitor, so there is no need to plug external cables. In high-definition systems, the output stream of the PVR is displayed in HD on the DVI channel.



Keys	Function
	Decrease value in menu
	Increase value in menu
	Monitor menu
	Move down in menu
	Move up in menu
	Channel selection
	Turn on/off the monitor

4.3.3 HD Personal Video Recorder (PVR)

See annex A.

5. AXSUB Limited Warranty for AxVIEW and Accessories

This Limited Warranty is valid as of August 1st, 2012.

AXSUB Inc. ("AXSUB") provides this limited warranty to those who have purchased the AxVIEW and/or AXSUB diving accessories and equipment. AXSUB warrants that during the Warranty Period, AXSUB or an AXSUB Authorized Service Center will, at its sole discretion, remedy defects in materials or workmanship free of charge either by a) repairing the Product or the parts, or b) replacing the Product or the parts, or c) refunding the purchase price of the Product, subject to the terms and conditions of this Limited Warranty. Your mandatory legal rights under your applicable national laws relating to the sale of consumer products are not affected by this Limited Warranty.

This Limited Warranty is only valid and enforceable in the country in which you purchased the Product, provided that AXSUB intended to sell the Product in that country. If, however, you purchased the Product in a member state of the European Union, Iceland, Norway, Switzerland or Turkey, and AXSUB originally intended to sell the Product in one of these countries, this Limited Warranty is valid and enforceable in all of these countries. The warranty service may be limited due to possible country-specific elements in the Products. Any service made during and after warranty is subject to service fee and compensation for the shipment costs incurred by AXSUB or an AXSUB Authorized Service Centre. You can have warranty service in a country other than the country in which you purchased the Product.

5.1 Warranty Period

The Warranty Period starts at the date of retail purchase by the original end-user purchaser. The Product may consist of several different parts, and the different parts may be covered by a different warranty period (hereinafter "Warranty Period"). The different Warranty Periods are:

- 1) One (1) year for the AxVIEW systems
- 2) Three (3) months for the consumable parts and accessories, including (but not limited to) rechargeable batteries, chargers, cameras, lamps, depth meters, cables, power supply (whether included in the AxVIEW sales package or sold separately).

To the extent your national laws permit, the Warranty Period will not be extended or renewed or otherwise affected due to subsequent resale, AXSUB authorized repair or replacement of the Product. However, part(s) repaired or replaced during the Warranty Period will be warranted for the remainder of the original Warranty Period or for three (3) months from the date of repair or replacement, whichever is longer.

5.2 Exclusions and Limitations

This Limited Warranty does not cover:

- 1) a) normal wear and tear, b) defects caused by rough handling (including, without limitation, defects caused by sharp items, by bending, compressing or dropping, etc.), or c) defects or damage caused by misuse of the Product, including use that is contrary to the instructions provided by AXSUB (e.g. as set out in the Product's user guide and/instruction manual), and/or e) other acts beyond the reasonable control of AXSUB;
- 2) User manuals or any third-party software (even if packed or sold with the AXSUB hardware), settings, content or data, whether included or downloaded in the Product, or whether included during installment, assembly, shipping or at any other time in the delivery chain or otherwise and in any way acquired by you;
- 3) Defects or alleged defects caused by the fact that the Product was used with, or connected to, any product, accessory, software and/or service not manufactured or supplied by AXSUB, or was used otherwise than for its intended use;
- 4) Usage with a power supply other than AXSUB product PS-24V-001;
- 5) Usage with a battery different than an AXSUB Battery Pack B05Ah-24VDC or B15Ah-24VDC;
- 6) Usage with a power source different outside limits of the power supply: 100-240VAC 50/60Hz.

This Limited Warranty is not enforceable if:

- 1) The Product has been opened, modified or repaired by anyone other than AXSUB or a AXSUB Authorized Service Centre;
- 2) The Product has been repaired using unauthorized spare parts;
- 3) The Product's serial number has been removed, erased, defaced, altered or made illegible in any way - and this shall be determined at the sole discretion of AXSUB;
- 4) The Product has been used when surrounding temperature exceed the limits of -20...50°C;
- 5) The Product has been exposed to influence from chemical products;
- 6) The Product has been cleaned with a high pressure air jet or with any other procedure than the one described in this User Manual

AXSUB does not warrant that the operation of the Product will be uninterrupted or error free or that the Product will work in combination with any hardware or software provide by a third party.

5.3 Access to AXSUB warranty service

Please access and review the online help resources available at www.axsub.com or referred to in the User Manual before seeking warranty service.

If a claim under this Limited Warranty appears to be necessary, please contact your local authorized AXSUB retailer – for contact information please visit the AXSUB website www.axsub.com or call the AXSUB Help Desk (national or premium rates may apply) for further details on how to make a claim. You will then be advised on how to bring your Product for warranty service. Should you wish to return the Product by shipping it to your local authorized AXSUB retailer, please use prepaid freight. When making a claim under this Limited Warranty you are required to include your name and address, proof of purchase and/or service registration card (AXSUB warranty registration at www.axsub.com is considered adequate for this purpose), as required in your country, which clearly indicates the serial number, name and address of the seller, the date and place of purchase, and the product type. The claim will be honored and the Product repaired or replaced at no charge and returned in a reasonable amount of time. This shall be determined at the sole discretion of AXSUB or an AXSUB Authorized Service Center. If the Product is found not to be covered by the terms and conditions of this Limited Warranty, AXSUB or an AXSUB Authorized Service Centre reserve the right to charge a handling fee.

Any claim under this Limited Warranty is subject to you notifying AXSUB or a AXSUB Authorized Service center of the alleged defect within a reasonable time of it having come to your attention, and in any event no later than before the expiry of the Warranty Period.

5.4 Other Important Notices

Please remember to take backup copies of all important content and data stored in your Product (if applicable) because content and data may be lost during repair or replacement of the Product. AXSUB or a AXSUB Authorized Service Centre is not responsible for any damage or loss of any kind whatsoever resulting from loss of, damage to, or corruption of content or data during repair or replacement of the Product. When the Product or a part is replaced, any replaced item becomes the property of AXSUB. If a refund is given, the Product for which the refund is given must be returned to an AXSUB Authorized Service Centre as it becomes the property of AXSUB and/or AXSUB Authorized Service Centre. When repairing or replacing the Product, AXSUB or an AXSUB Authorized Service Centre may use products or parts that are new, equivalent to new or re-conditioned.

5.5 Limitation of Liability

TO THE MAXIMUM EXTENT PERMITTED BY APPLICABLE MANDATORY LAWS, THIS LIMITED WARRANTY IS YOUR SOLE AND EXCLUSIVE REMEDY AND IS IN LIEU OF ALL OTHER WARRANTIES EXPRESSED OR IMPLIED. AXSUB SHALL NOT BE LIABLE FOR SPECIAL, INCIDENTAL, PUNITIVE OR CONSEQUENTIAL DAMAGES, INCLUDING BUT NOT LIMITED TO LOSS OF ANTICIPATED BENEFITS OR PROFITS, LOSS OF SAVINGS OR REVENUE, LOSS OF DATA, PUNITIVE DAMAGES, LOSS OF USE OF THE PRODUCT OR ANY ASSOCIATED EQUIPMENT, COST OF CAPITAL, COST OF ANY SUBSTITUTE EQUIPMENT OR FACILITIES, DOWNTIME, THE CLAIMS OF ANY THIRD PARTIES, INCLUDING CUSTOMERS, AND INJURY TO PROPERTY RESULTING FROM THE PURCHASE OR USE OF THE PRODUCT OR ARISING FROM BREACH OF THE WARRANTY, BREACH OF CONTRACT, NEGLIGENCE, STRICT TORT, OR ANY OTHER LEGAL OR EQUITABLE THEORY, EVEN IF AXSUB KNEW OF THE POSSIBILITY OF SUCH DAMAGES. AXSUB SHALL NOT BE LIABLE FOR DELAY IN RENDERING SERVICE UNDER THE LIMITED WARRANTY, OR LOSS OF USE DURING THE TIME THE PRODUCT IS BEING REPAIRED.

6. Disposal of the Device

Production of this equipment required the extraction and use of natural resources. The equipment may contain substances that could be harmful to the environment or human health if improperly handled at the product's end of life. To avoid release of such substances into the environment and to reduce the use of natural resources, we encourage you to recycle this product in an appropriate system that will ensure that most of the materials are reused or recycled appropriately.

Treat this product as electronic waste; do not throw it in the garbage. If you wish, you may return the device to your nearest AXSUB dealer.

Annex A – Personal Video Recorder (PVR)

A dual channel high-definition personal video recorder to record video on a SD card of up to 128GB, with resolution up to 1080p and a framerate up to 25 fps. Recording can be configured to start recording automatically on power up.

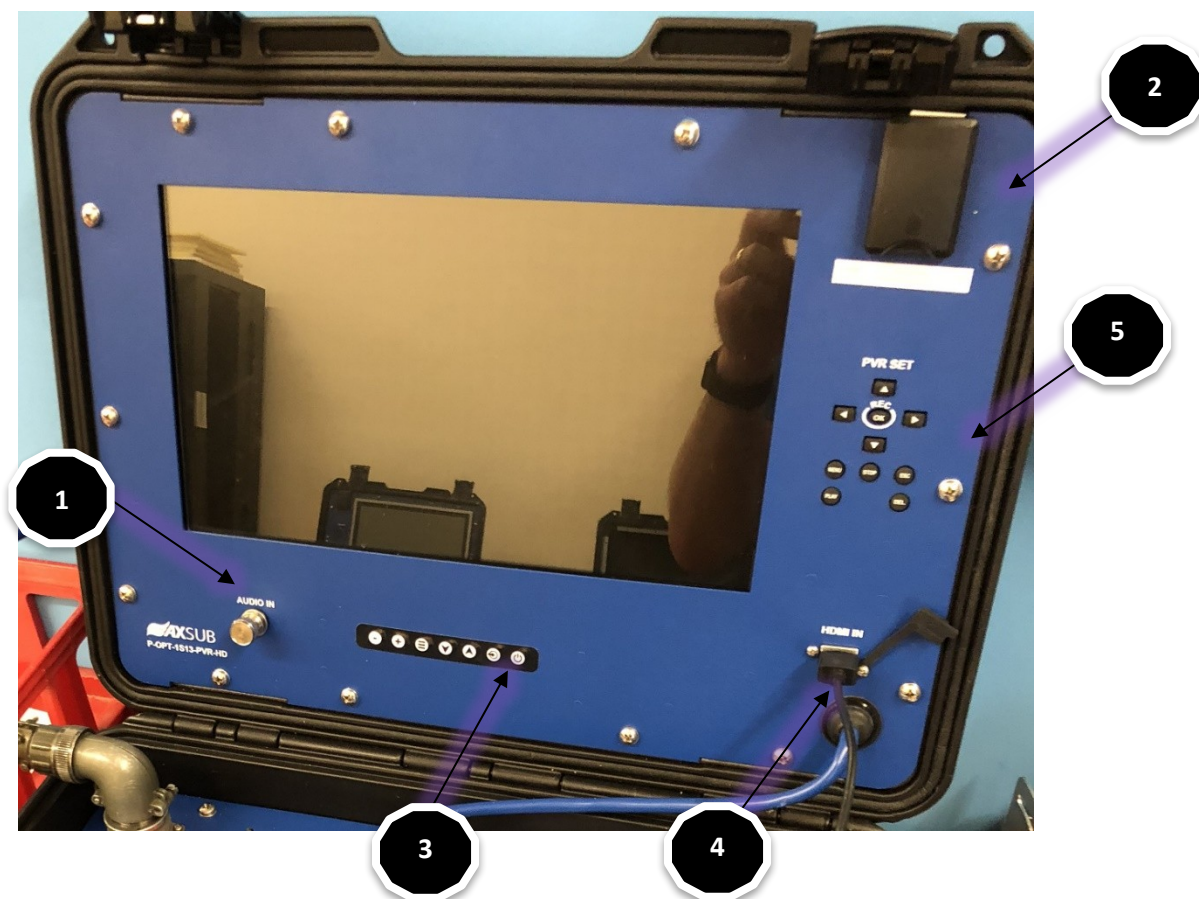


Figure 1 — AxVIEWHD with HD PVR Panel Description



- | | |
|---|---|
| 1) Audio input: | BNC input for audio recording (requires a separate communication system) |
| 2) SD card slot: | Provides the storage room for your footage and allows transferring it on a computer or switching memory cards for archival or expanded capacity. |
| 3) Source selector:
(2 nd to last button) | Switches the displayed input source, a tool-tip will appear on screen to identify the current selection (VIDEO for the HD PVR display, HDMI for an external source) |
| 4) HDMI input: | Connects to an external peripheral to use the screen as a monitor (up to 1080p60) |
| 5) PVR navigation pad: | Used to control and operate the HD PVR. |

Systems can be equipped with PVR Type 1 or Type 2, they perform the same but have slightly different user interfaces.



CAUTION. *Wait at least 15 seconds before removing the SD card when you power off the AxVIEW system to ensure the completion of ongoing write operations, avoiding undesirable effects as damaged media files and/or a corrupted filesystem.*

Controllers

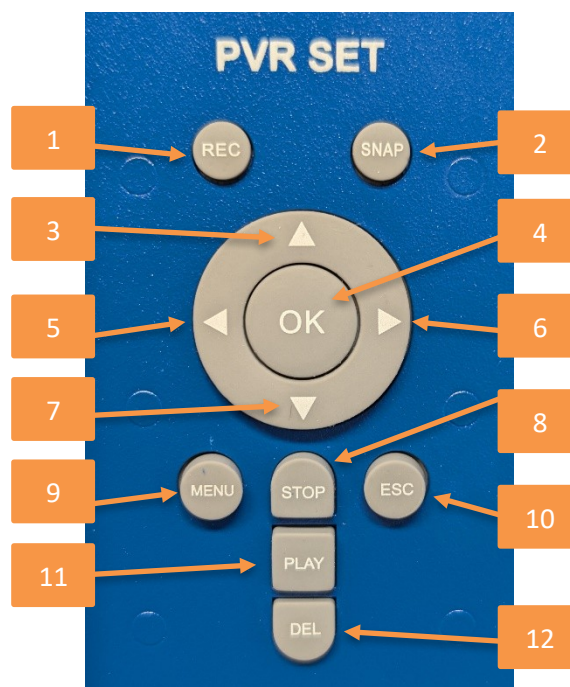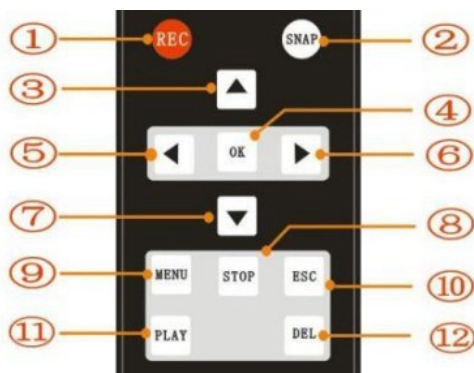

	Key	Function
1	REC	Starts recording
2	SNAP	Takes a snapshot of the current video frame
3	▲	Navigates upwards, takes a snapshot (alt.)
4	OK	Confirms a selection, starts recording/playback (alt.)
5	◀	Navigates left, switches the preview mode (alt.)
6	▶	Navigates right, switches the preview mode (alt.)
7	▼	Navigates downwards
8	STOP	Stops recording/playback
9	MENU	Enters the main menu
10	ESC	Returns to the previous menu
11	PLAY	Starts/pauses playback, enters the playback mode (alt.)
12	DEL	Deletes the highlighted item

HD PVR Type 1

Preview and Recording Instructions

The PVR preview can be watched on the internal DVI input of the portable system or through the HDMI connector labelled “PVR OUT” found on the rear of rackmount systems.

The preview and recording modes are shown in the image below. The on-screen display regions include the following information:

- Top-left: **Current date and time (used in the filenames and file properties)**
- Top-right: **Recording feed statuses, available and total capacity of the SD card**
- Bottom-left: **Elapsed recording time (hh:mm:ss format)**
- Bottom-right: **Displayed input feed (CAM1, CAM2 or Both)**



Figure 2 — PVR Type I, Preview Screen

In preview mode, press “◀” or “▶” keys to switch between channel 1, channel 2, or both channels being displayed in real time.

Press **REC/STOP** to start or stop recordings. CAM1, CAM2 or both channels will record regardless of what is showed on the preview screen. Check *Setup Instructions* to find out how to enter *Video Parameters* and select which channel(s) should get recorded.

Playback Instructions

- When in the preview mode, press the **MENU** button and select **VIDEO** to access the video playback menu.
- Alternatively, press the **PLAY** button on controller to enter the PVR video playback menu.
- To check the snapshots, select **PHOTO** from the main menu. Video and image playback use a similar menu.

Press “▲” or “▼” key to move in the menu.

Press “◀” or “▶” key to change page.

In the folder list, choose the filename that represent the date and time of the footage you want to watch and press **OK**. To leave the menu, press the **ESC** button.



Figure 3 — PVR Type I, Video Playback Menu

When browsing a folder, all the recorded media files will be listed. If both channels have been recorded simultaneously, pressing **OK** will display them side-to-side. Press “◀”, “▶” or the **OK** key to watch one or the other. Press “▲” or “▼” key to access fast-forward or fast-backward features. Press **PLAY** to start or pause the playback.

DELETING FILES ON THE SD CARD

To delete the files on the SD card, you can use your computer or the PVR directly.

When deleting with the PVR, enter the folder and find the file you want to delete. Then, press **DEL** key on remote controller to delete the selected file. You can also delete an entire folder. **When a file/folder is deleted from the SD card, it cannot be recovered, it is a non-reversible process.**

Setup Instructions

When in the preview mode, press the **MENU** button on controller to enter the PVR main menu.



Figure 4 — PVR Type I, Main Menu

Press “◀”, “▶”, “▲” or “▼” key to choose different menu.

Press **OK** key to enter the menu.

Video Menu

Check the playback instructions, it is used to access the recording on the device.

Photo Menu

Check the playback instructions, it is used to access the snapshot (pictures) taken.



Figure 5 — PVR Type I, Image Settings Menu

CVBS OUT	Unused
Resolution	Selects the output resolution of the display (defaults at 1920x1080_60)
Brightness	Makes the picture lighter or darker
Chroma	Controls how vivid or muted the colors appear
Contrast	Adjusts the difference between the lightest and darkest areas of the image
Mirror	Flips the image horizontally, as if viewed in a mirror
Flip	Flips the image vertically, turning it upside down
Noise reduction	Reduces visual distortions or graininess in the image







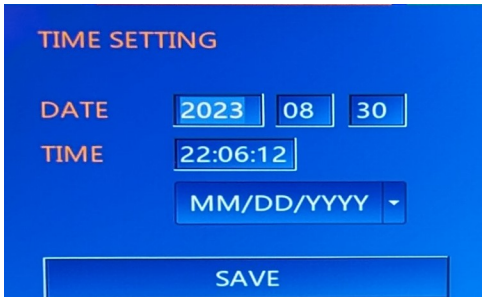
Figure 6 — PVR Type I, Video Settings Menu

VIDEO CLIP TIME	Chooses the length for each recorded video file. Shorter segments can be easier to manage and locate specific events; longer segments mean fewer individual files.
VIDEO CLIP TIME (MD)	Determines for how long the PVR will record each video clip once movement is detected on the image, if motion detection is on (see below).
COMPRESS	Used to choose the video codec composing the output files. Prefer H264 if compatibility is critical and/or if you plan on doing some editing. Otherwise, stick to H265 for archival purposes.
PHOTO QUALITY	Controls the video bitrate, which affects picture quality and file size. Higher levels provide better visuals at the expense of larger file sizes.
OVERWRITE	Allows continuous recording. If storage is full, the oldest footage will be automatically replaced by new recordings.
RECORD MODE	We recommend leaving the POWER UP setting on. This will automatically start recording as soon as the system powers on, requiring no manual intervention.
VIDEO QUALITY	Unused

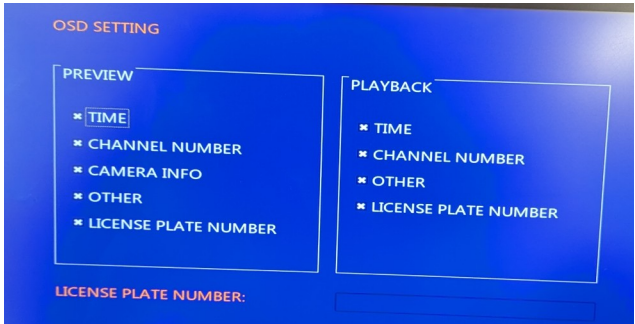

Figure 7 — PVR Type I, System Settings Menu

LANGUAGE	Selects the language of the user interface
OSD	<p>Lets you choose which information is displayed on the preview screen</p> 
DISK	<p>Formats the SD card using the Large FAT32 filesystem</p> 

	<p> CAUTION. After the SD card is formatted, all files on the SD card will be deleted and cannot be recovered.</p> <p> CAUTION. To open the SD card with macOS, do not format the SD card directly with the PVR. Use your Mac to format the SD.</p>
RESET	DO NOT USE
INFO	-
MOTION DETECT	Enables event-based recording triggered by movement. Not recommended.
LOGIN	Secures the PVR interface with a user-defined passcode. Not recommended.
SCHEDULE RECORDING	Used to program recordings in advance. Not recommended.
SET DATE/TIME	<p>Adjusts the date and time that will be used to name the files, provide their creation time and allow programmed recordings to take place.</p> 

HD PVR Type 2

Preview and Recording Instructions

The PVR preview can be watched on the DVI input of the portable system or through the HDMI connector labelled “PVR OUT” on rackmount systems.

The preview and recording modes are shown in the image below. The On-Screen Display (OSD) include the following information:

- 1) Displayed input feed (CAM1, CAM2 or Both)
- 2) Current date and time (used in the filenames and file properties)
- 3) Recording status represented as a blinking dot
- 4) Available and total capacity of the SD card

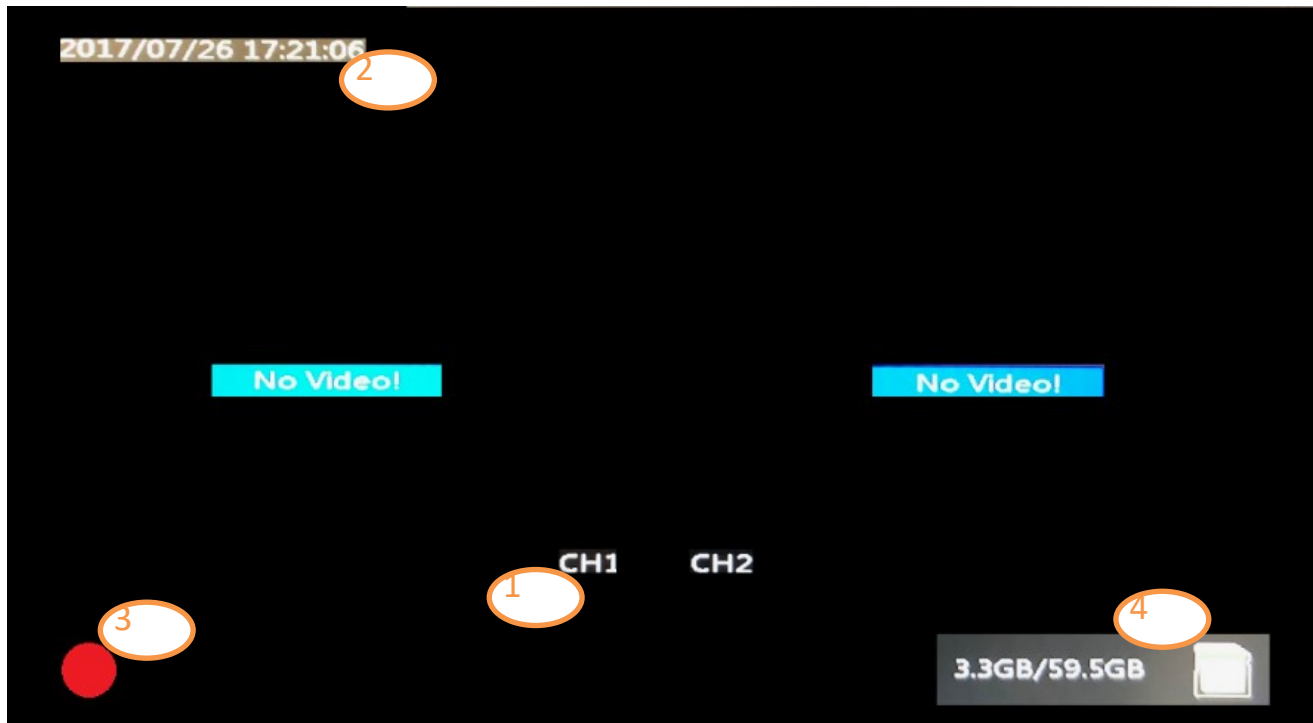


Figure 8 — PVR Type II, Preview Screen

In preview mode, press “◀” or “▶” keys to switch between channel 1, channel 2, or both channels being displayed in real time.

Press **REC/STOP** to start or stop recordings. CAM1, CAM2 or both channels will record regardless of what is showed on the preview screen. Check *Setup Instructions* to find out how to enter *Video Parameters* and select which channel(s) should get recorded.

Playback Instructions

When in the preview mode, press the **MENU** button and select **PLAY AVI** to access the video playback menu. Alternatively, press the **PLAY** button on controller to enter the PVR video playback menu. To check the snapshots, select **PLAY JPEG** from the main menu. Video and image playback use a similar menu.

Press “▲” or “▼” key to move in the menu.

Press “◀” or “▶” key to change page.

In the folder list, choose the date of the video you want to watch and press **OK**. To leave the menu, press the **ESC** button.



The screenshot shows a video playback menu titled "VIDEO PLAYBACK". At the top, it displays the path "PATH: /mnt/SdCard1/20171010" and the file type "*.AVI". Below this is a list of 14 video files, each with a file number, filename, duration, resolution, and size. The files are listed in a table format. At the bottom of the screen, it shows "001/003Page" with left and right arrow icons.

File Number	Filename	Duration	Resolution	Size
0001	20171010_162123_2.avi	00:07:24	5MP	321.2MB
0002	20171010_162123_1.avi	00:07:24	1080P	252.4MB
0003	20171010_162111_2.avi	00:00:03	5MP	2.6MB
0004	20171010_162111_1.avi	00:00:03	1080P	2.1MB
0005	20171010_162050_2.avi	00:00:13	5MP	9.6MB
0006	20171010_162050_1.avi	00:00:13	1080P	7.5MB
0007	20171010_154651_2.avi	00:04:11	5MP	181.0MB
0008	20171010_154651_1.avi	00:04:10	1080P	140.3MB
0009	20171010_154605_2.avi	00:00:15	5MP	10.9MB
0010	20171010_154605_1.avi	00:00:14	1080P	8.0MB
0011	20171010_151854_2.avi	00:18:38	5MP	806.8MB
0012	20171010_151854_1.avi	00:18:37	1080P	634.5MB
0013	20171010_145132_2.avi	00:21:50	5MP	948.0MB
0014	20171010_145132_1.avi	00:21:50	1080P	359.3MB

When browsing a folder, all the recorded media files will be listed. If both channels have been recorded simultaneously, pressing **OK** will display them side-to-side. Press “◀”, “▶” or the **OK** key to watch one or the other. Press “▲” or “▼” key to access fast-forward or fast-backward features. Press **PLAY** to start or pause the playback.

DELETING FILES ON THE SD CARD

To delete the files on the SD card, you can use your computer or the PVR directly. When deleting with the PVR, enter the folder and find the file you want to delete. Then, press **DEL** key on remote controller to delete the selected file. You can also delete an entire folder. **When a file/folder is deleted from the SD card, it cannot be recovered, it is a non-reversible process.**

Setup Instructions



Press “◀”, “▶”, “▲” or “▼” key to choose different menu.


Press **OK** key to enter the menu.

Display Setup



HDMI OUTPUT	Selects the output resolution of the display
PREVIEW MODE	Sets the cameras to display at every startup (Dual Channel [default], CH1 or CH2).
FULL SCREEN	<ul style="list-style-type: none">• Original: CH1 on the left, CH2 on the right, keeping the original aspect ratio• Horizontal View: CH1 on the left, CH2 on the right, fill the entire screen• Vertical View
AVOUT	Unused

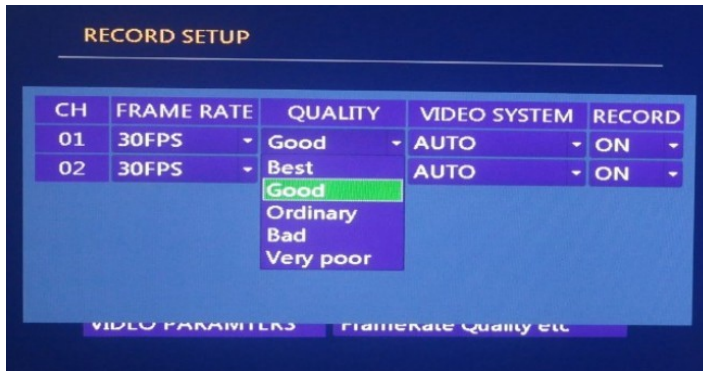

RECORD MODE	Power Up Rec (Starts recording at boot [default]), Manual Rec (User has to initiate recordings with REC and STOP keys), Timer Rec (Records based on a schedule), Motion Detect (Only records once triggered by motion detection)
VIDEO CLIP	Chooses the length for each recorded video file. Shorter segments can be easier to manage and locate specific events; longer segments mean fewer individual files.
OVERWRITE	Allows continuous recording. If storage is full, the oldest footage will be automatically replaced by new recordings.
TIMESTAMP	If enabled, the date and time will appear on the screen and the recordings.
SHUTDOWN TIMES(S)	0 (Unused)
TIMING	Used to program recordings in advance. Not recommended.
MOTION DETECT	Enables event-based recording triggered by movement. Not recommended.
VIDEO PARAMETERS	RECORD field must be left to OFF if the channel is unused 

Play AVI Menu

Check the playback instructions, it is used to access the recordings on the device.

Play JPEG Menu

Check the playback instructions, it is used to access the previously taken snapshots.

Disk Setup

DISK SELECT	SD1 (no other option should be selected)
FORMAT DISK	Format selected disk (all information will be lost)



CAUTION. Formatting an SD card will delete its content in a non-reversible manner, please be advised to backup important data before attempting such an operation.




CAUTION. In order to render the memory card compatible with macOS, do not format it directly with the PVR. Preferably use your Mac or a computer to format the SD card using the ExFAT filesystem.

System Setup

LANGUAGE	English
DATE TIME	Press OK to enter the date menu
DATE FORMAT	YYYYMMDD by default
DEVICE ID	Unused
LOGIN PASSWORD	Press OK to set a password

VALIDATE LOGIN	Secures the PVR interface with a user-defined passcode. Not recommended.
SYSTEM INFO	Upgrades the PVR with a factory provided file
DEFAULT	Sets all the settings to their default values
SYSTEM RESTART	Reboots the PVR

 **CAUTION.** *If you set a password and lose it, the unit needs to be sent to a service center for recovery. Use this function with extreme precaution.*

COPYRIGHT

This publication and its contents are proprietary to AXSUB Inc.

AXSUB, AxDDM, AxVIEW, AxSEE, AxLIGHT, AxDEPTH, SMART CAMERA and their logos are registered or unregistered trademarks of AXSUB Inc. All rights reserved.

While we have taken great care to ensure that information contained in this documentation is both comprehensive and accurate, no warranty of accuracy is expressed or implied. Its content is subject to change at any time without notice.

www.AXSUB.com

Made in Canada
© AXSUB 06/2025